


# LCD-B Instructions

## LCD Button Instructions

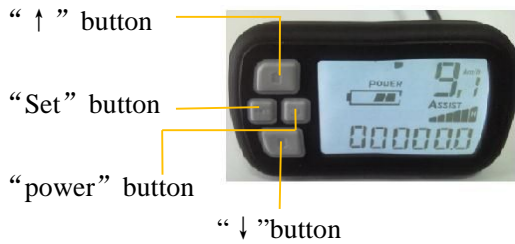

## Brightness Adjustment

Press "set" button into backlight adjustment mode.




Adjust brightness through "↑" button and "↓" button.

Five brightness levels are available at disposal.

## Wheel Diameter Setting

Press "Set" button for six seconds into wheel diameter setting mode. (for the vehicle assembly worker). It is shown as follows:



When shown as , change wheel diameter and the perimeter of rim through "↑" button and "↓" button.

Setting the range of the wheel diameter : 16" ~ 28" (different perimeter of the rim can be selected with the same wheel diameter). Unit of the perimeter of the rim : mm.

With no further button operation within 5 seconds, the system would automatically exit "Set" mode and return back into normal working mode.

Press "Set" button and "↓" button simultaneously to display error code, which indicates the malfunction of the system due to the systematic error.

## Assistance Adjustment

"↑" button: enhance assist;

"↓" button: weaken assist;

Six levels are available at disposal.



Press "↓" button until "Auto" icon is shown, the Auto Mode is shown as follows:



## Riding Mileage & Time Display

Press "Set" button into Trip Distance Display mode (MILE/KM)



Press "↓" button to clear data








Press "Set" button again into trip riding time display mode

Press "↓" button to clear data


Press "↑" button and "↓" button simultaneously for about six seconds to switch the display between Kilometer and Mile, including the speed of riding, trip distance and ODO.



## Other Display

- Battery Power display: 
- Motor power display: 
- Speed: 
- Work Mode:  
- ODO:  KM or MILE
- Error Code: 

## Wiring Diagram

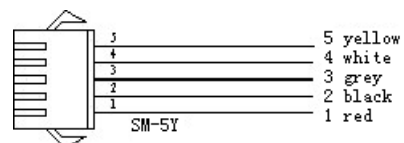

1: 5V 2: GND 3: Tx 4: Rx 5: Lock wire