




WICKER ROUND DINING TABLE

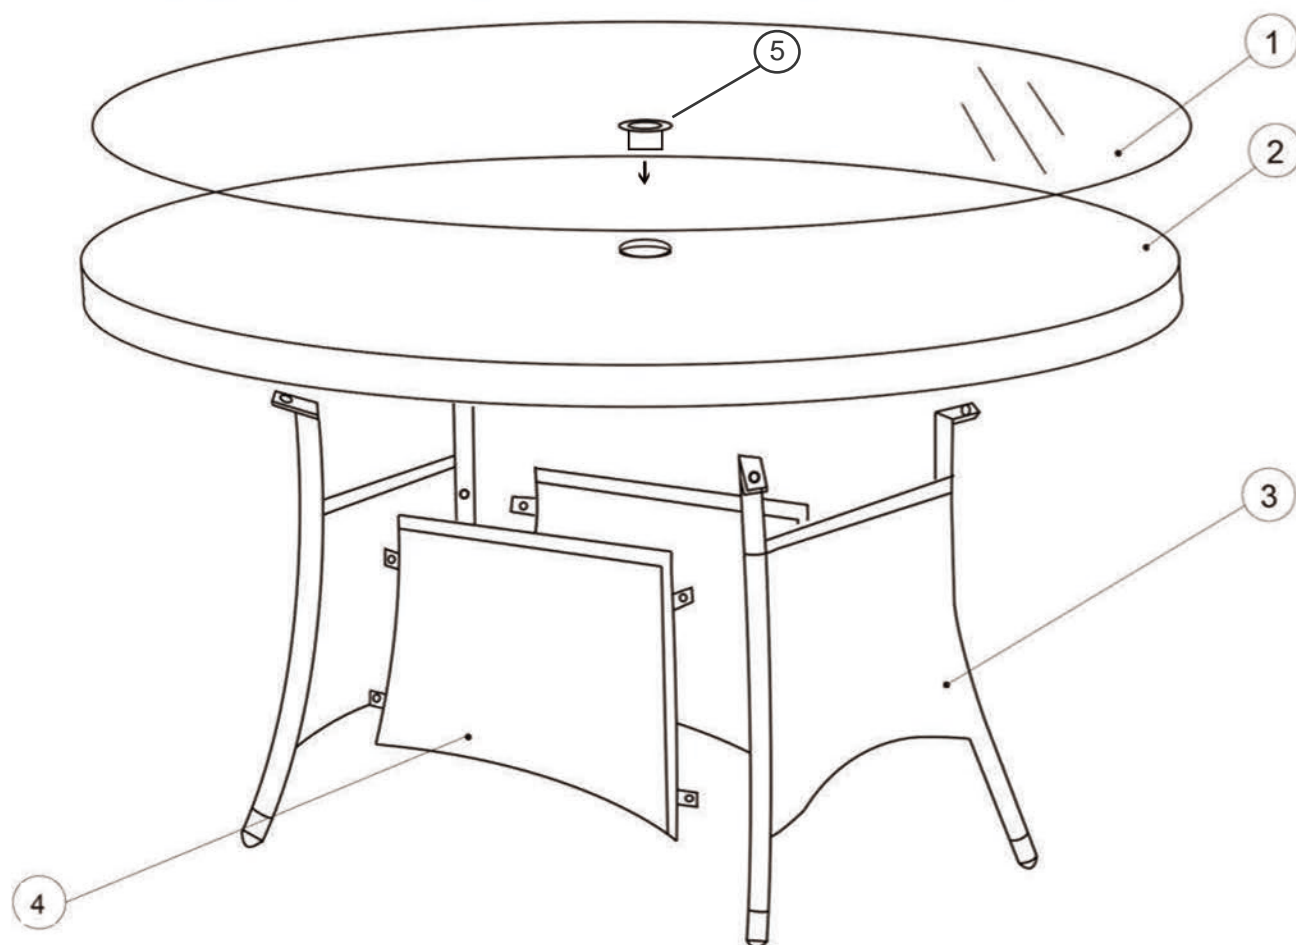


Assembly instructions

GETTING TO KNOW YOUR PRODUCT



Components supplied. Please use this guide if you require replacement parts.

Ref	Dimensions	Visual	Qty	Ctn
1	Ø180x0.8cm		1	1
2	Ø181x6cm		1	1


Ref	Dimensions	Visual	Qty	Ctn
3	110x71cm		2	1
4	97x35cm		2	1
5	7x5cm		1	1

WICKER ROUND DINING TABLE

Assembly instructions

Fixtures and fittings
supplied(actual size)

Ref	Dimensions	Qty
A	M6x20mm	12
B	Ø12x1mm	12
C	22X66mm	1

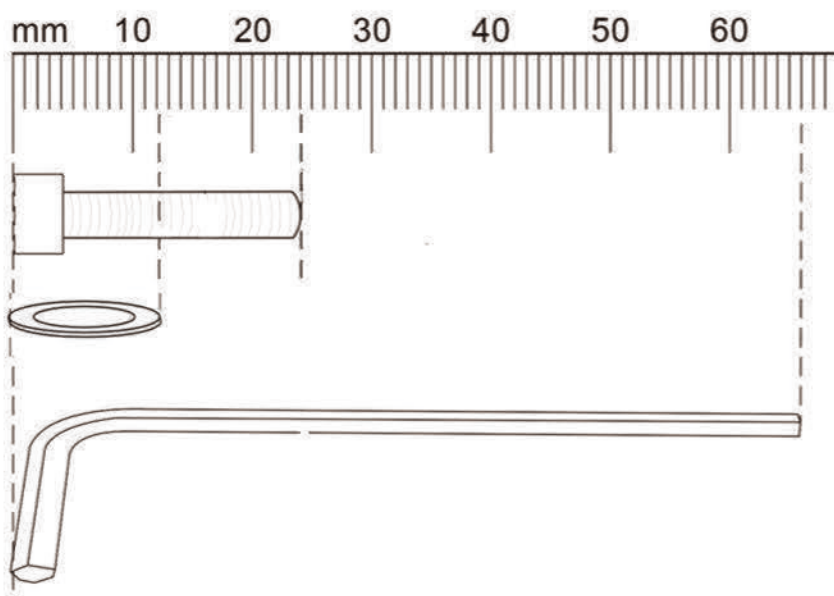


WICKER ROUND DINING TABLE

Assembly instructions

1

Tip - Do not fully tighten the bolts until the item is fully assembled.

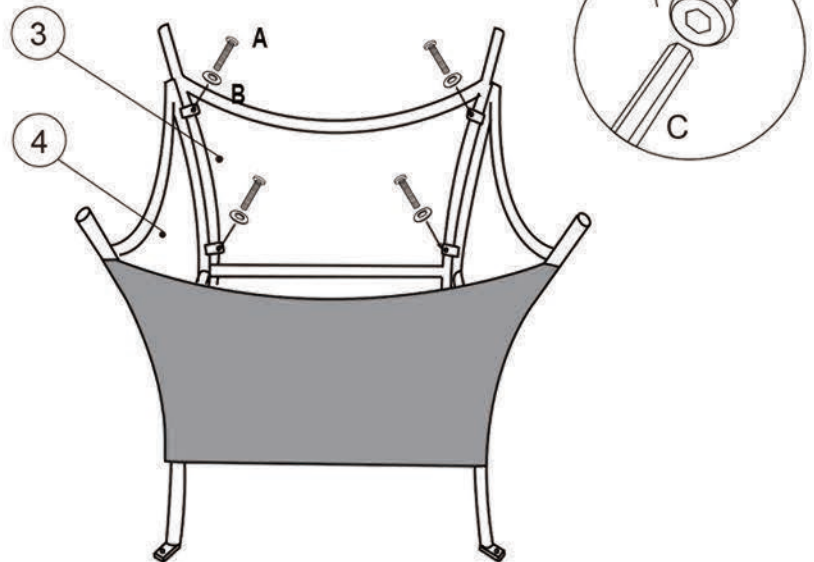

Ax8

M6 x 20mm



Bx8

ø12 x 1.0mm




Cx1

22 x 66 mm



2

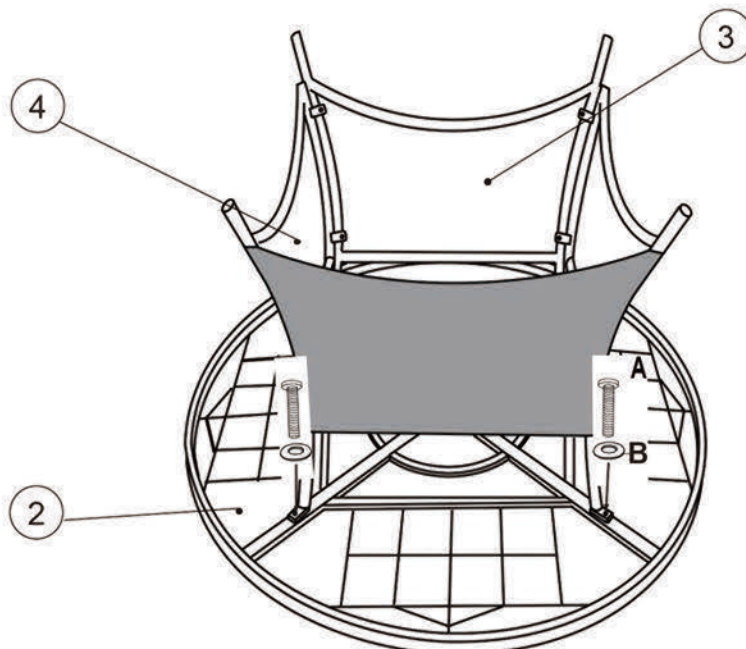

Ax4

M6 x 20mm



Bx4

ø16 x 1.0mm



Cx1

22 x 66 mm



– Remember to fully tighten all bolts before turning over.

WICKER ROUND DINING TABLE

Assembly instructions

3

