
Three wheel cargo bike assembly manual

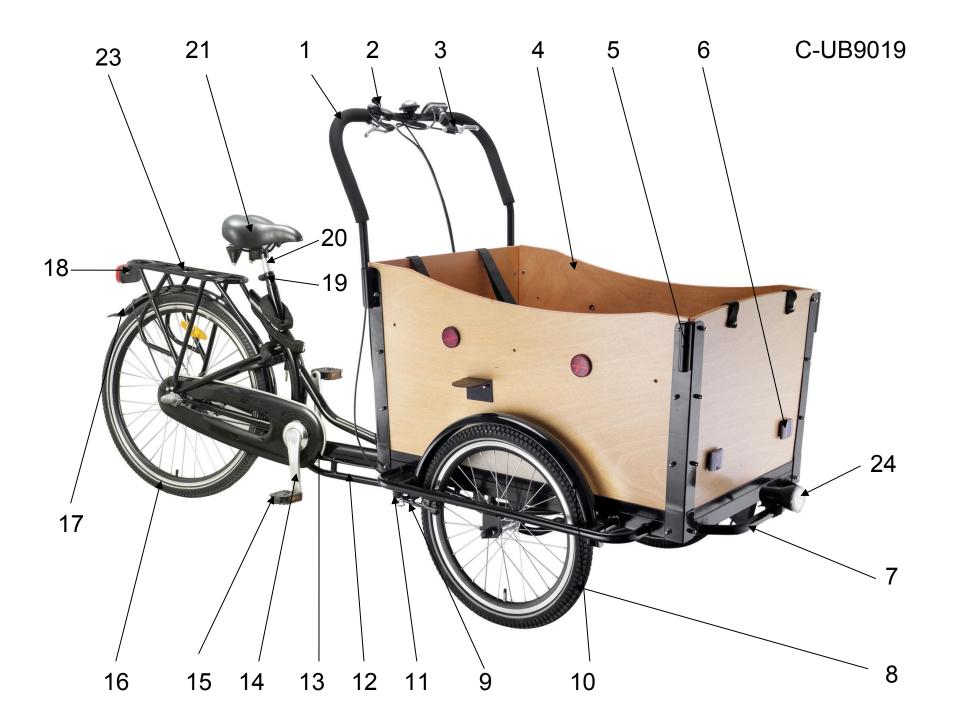


1.Handle bar & grip 2. gear shift 3. brake lever 4.box 5.corner iron 6. front reflector

7.Front frame (bottom border) 8.front wheel 9.front brake 10.fender

11.Bottom spacing pole 12.rear frame13.chain cover & chain 14.chainwheel and crank 15. Pedal

16.Rear wheel 17.rear fender 18. rear reflector 19.seat post lock 20.seat post 21.saddle

22. Rubber band 23. carrier 24. LED light

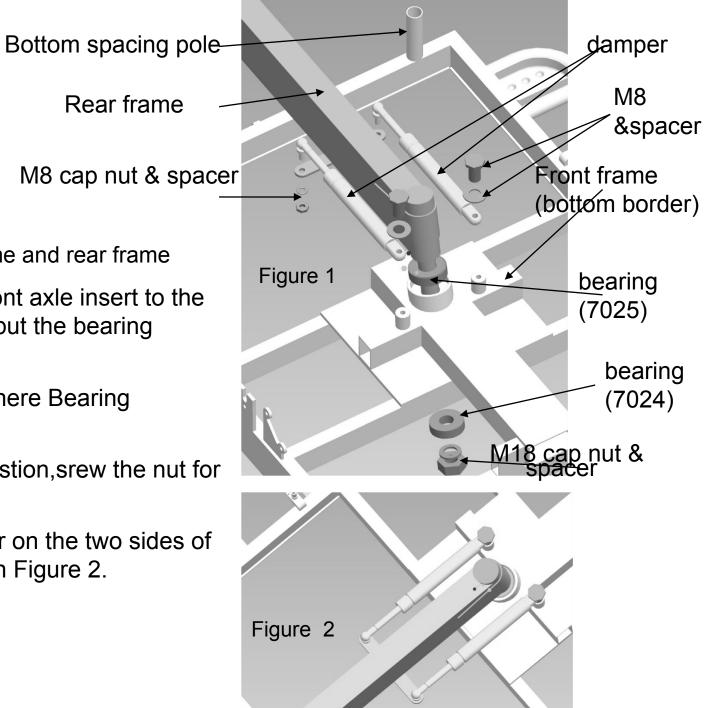

1Connecting front frame and rear frame

First let rear frame front axle insert to the front frame hole and put the bearing between them.


(Note: Daub butter where Bearing assembled).

After adjusting the postion, srew the nut for fixing.

Assemble the damper on the two sides of the frame as shown in Figure 2.

Second version, show in figure 3 and figure 4

Space all the parts as shown in figure 3, and lock it; Note: keep the knighthead and bottom border on the same level 。

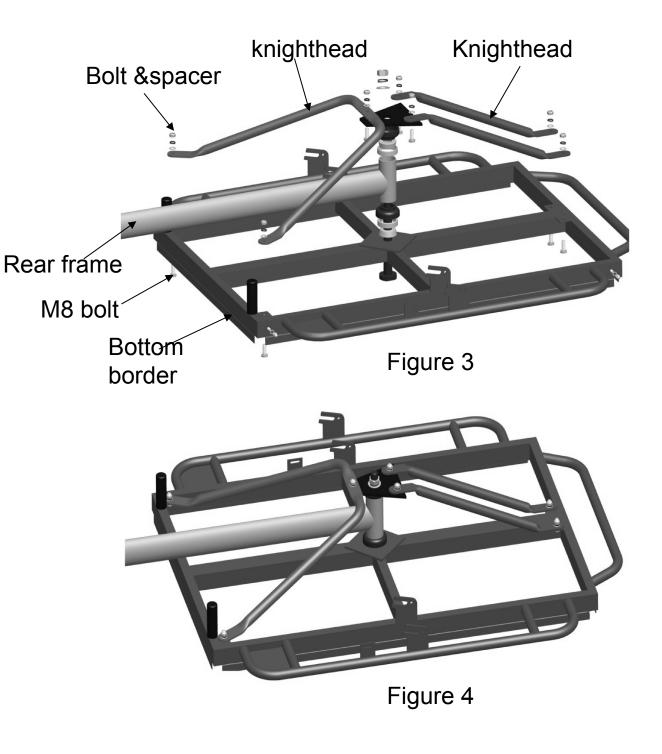


2.Assemble the wheel sets ,if use disc brake

Assemble the fenders on the front frame as shown in Figure 3 and fix the fender clip.

Put the front wheels on the two sides of front frame(bottom border) and use the safety hook and lock nut for fixing.

Assemble the disc brake on the brake fixing plate and lock it with screws and spacer as shown in Figure 4. (Figure 5 is finished.)

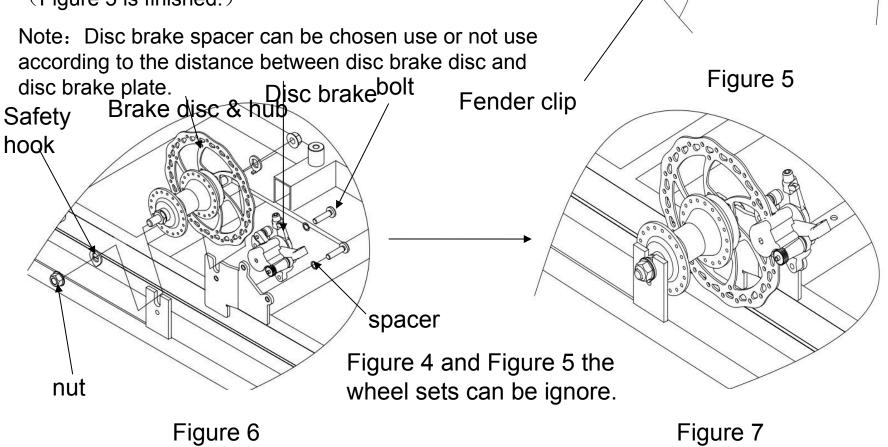


(0)

b.When use the roller brake


Assemble the fenders on bottom border as shown in Figure 3 and fix the fender clip. And then attach the roller brake onto the wheel hub with lock nut for fixing.

Put the front wheels on the two sides of front frame(bottom border) and fixing the roller brake end at fixing space. Adjust the brake and lock it with brake lock nut.

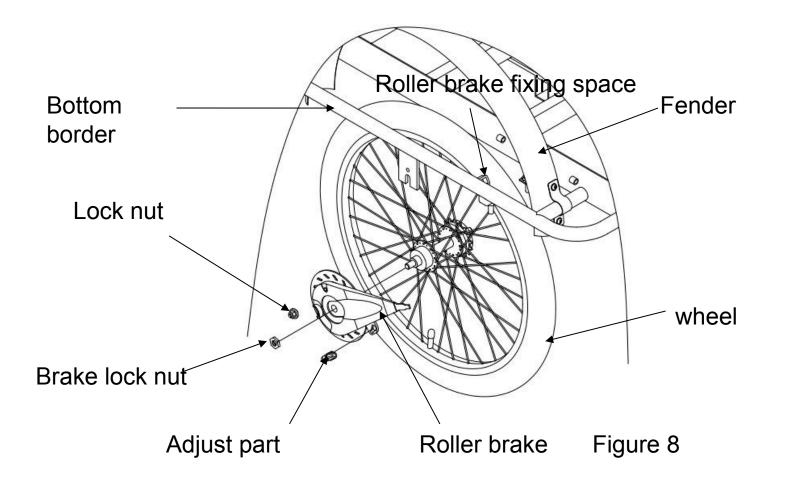

## C . Assemble the imitated roller brake

Assemble the fenders on bottom border as shown in Figure5 and fix the fender clip. And then attach the imitated roller brake onto the wheel hub with lock nut for fixingn as shown in figure 9. Put the front wheels on the two sides of front frame(bottom border) and fixing the imitated roller brake end at fixing space. Adjust the brake and lock it with brake lock nut.

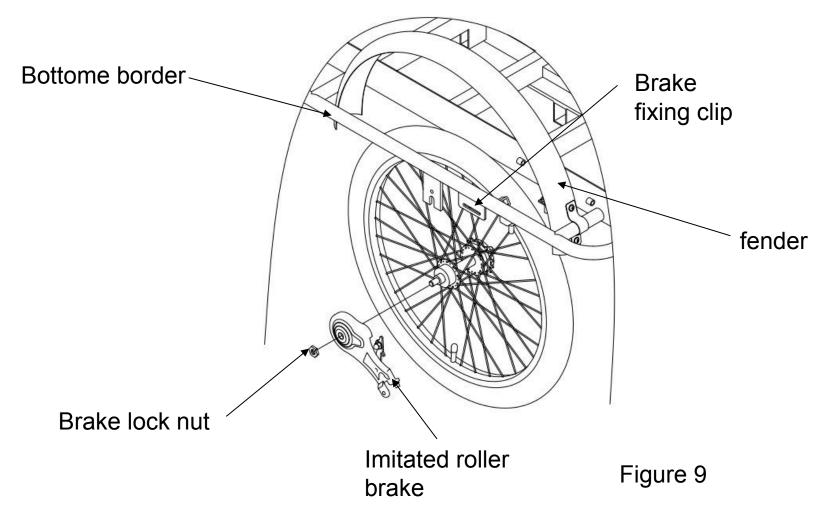

## D . Assemble the V brake

Assemble the fenders on bottom border as shown in Figure5 and fix the fender clip. Attach the V brake onto the V brake seat and lock it with V brake fixing bolt, adjust the brake cable and fixing it.


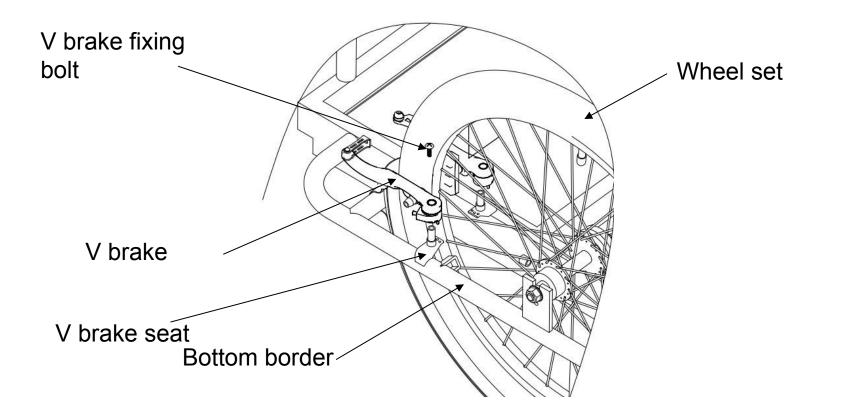


Figure 10


## e. Assemble drum brake

Assemble the fenders on bottom border as shown in Figure 5 and fix the fender clip. Put the two front wheel onto both sides of bottom border and fix end of drum brake on the drum brake fixing space, lock it with the lock nut and safety hook. Adjust the brake cable and lock it shown in figure 11

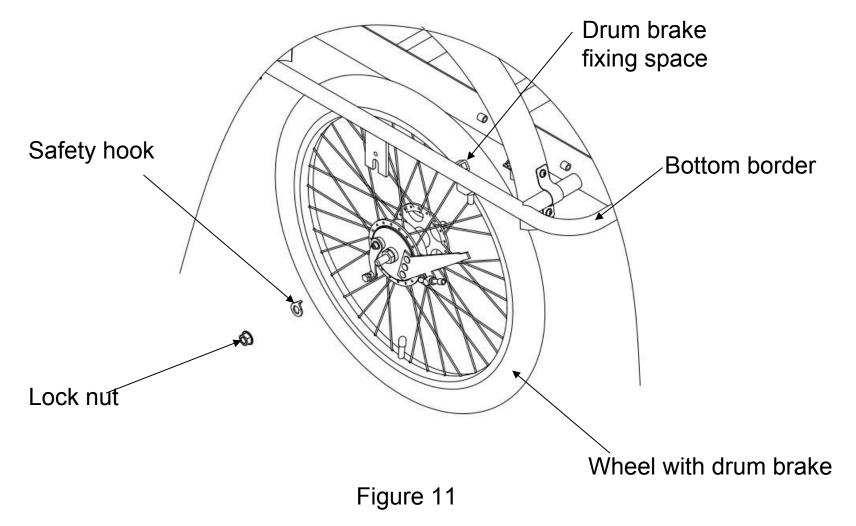

3.Assemble the box

Assemble the front box onto the front frame (bottom border) as shown in Figure 12 and Figure 9 with screw fixing. Fixing the safety belt and front reflector on the box

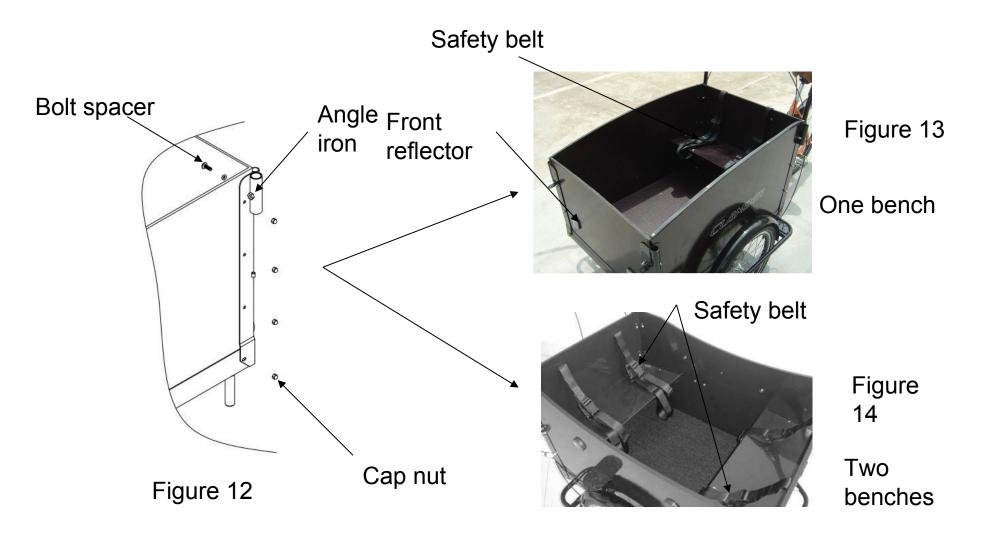

4.Assemble handlebar

Normally use two kinds of handlebar according to customer's request.

U- type handle bar assembly

Assembly the handle bar as below shown in figure 6 and figure 7, adjust the height and lock it.


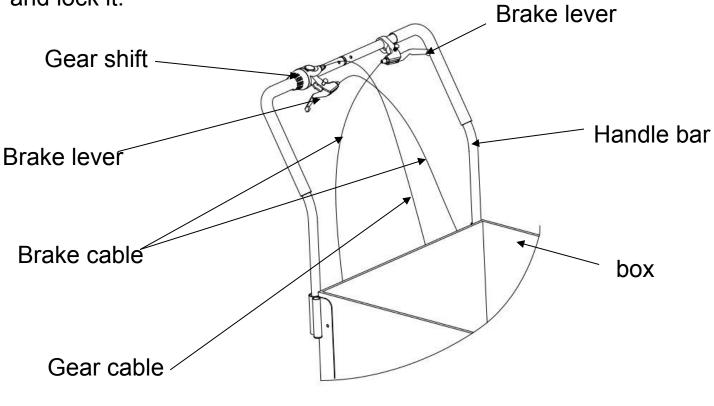


Figure 15

If use below handlebar

Assembly the handle bar as below shown in figure 6 and figure 7, adjust the height and lock it.

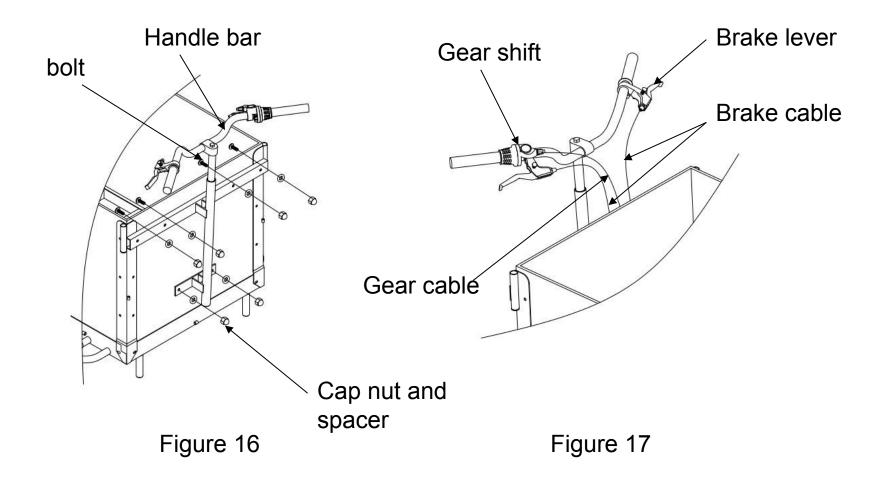

## 4.Saddle assembly

As shown in figure 10, Insert the seat post into the saddle and lock it, and then put another side of seat post insert into frame seat tube and fixing the seat post lock.

(Note: Safety line must be under the seat post lock. )

