

# Garage Series

---



## **Warning: Excessive weight hazard!**


Use two or more people to move, assemble, or install cabinets and locker to avoid back injury.

Do not leave children unattended near cabinets.


# INDEX

Tools Required/Hardwares Needed	1
Worktops/Weight Capacity	2
Installation options for Cabinets	3
Installing Leveling Feet (Optional Accessory)	4
Installing Pillars	5
Installing Hanging Panels	6
Attaching Cabinets together	7
Attaching Cabinets together/Removing Drawers	8
Mouting the Woktop	9
Attaching Pillars together	10
Installing Wall Cabinet	11
Installing Corner Wall Cabinet	12
Installing LED Lights (Optional Accessory)	13


# Tools Required



Adjustable wrench



Magnetic Leveler

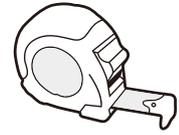


Tape Measure




Socket driver wrench




socket

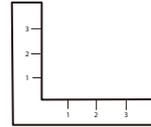

Set Square



Pencil

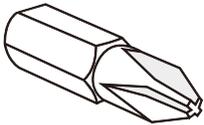

Phillips Bit



Phillips head screw driver




Cordless Power Drill



Masonry Bit

# Hardwares Needed



Hex Bolt (M6x16)




Nut (M6)



Plastic Pin



Hex Bolt (M8x16)



Washer (D8)



Spring Washer (D8)



Wood Screw (ST6x16)




Sunk Screw (M6x16)

# Worktops



26" Worktop. Fits over 1 Cabinet



53" Worktop. Fits over 2 Cabinets




80" Worktop. Fits over 3 Cabinets




Corner Worktop


# Weight Capacity

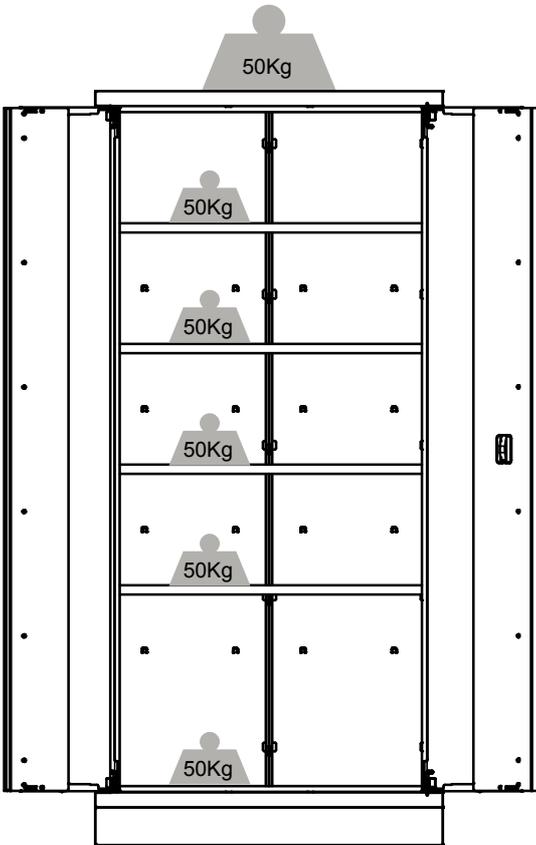


Double-door Locker  
Max 300Kg

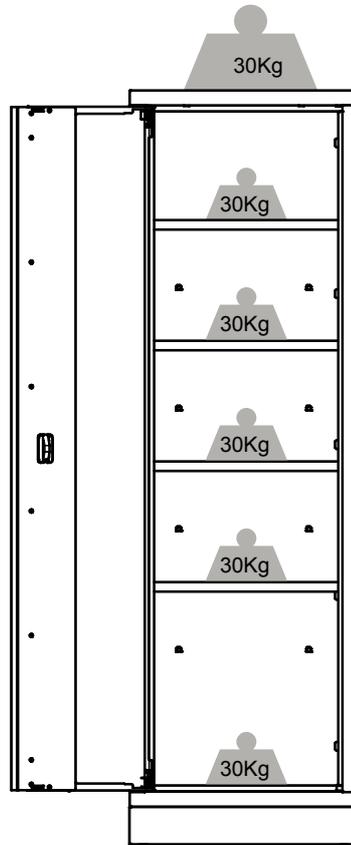


Single-door Locker  
Max 180Kg

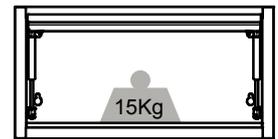


Wall Cabinet  
Max 15Kg

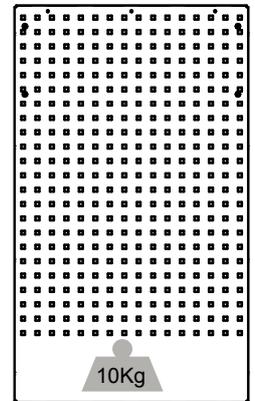


Hanging Panel  
Max 10Kg

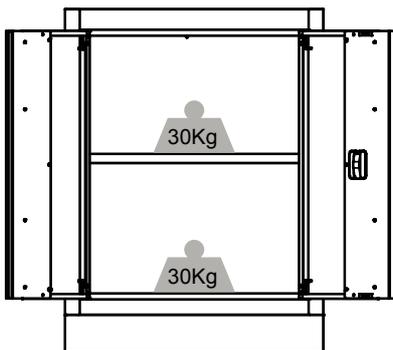

Base Cabinet  
Max 60Kg

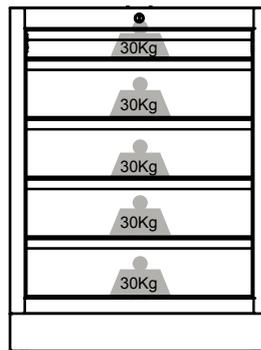

Drawer Cabinet  
Max 150Kg





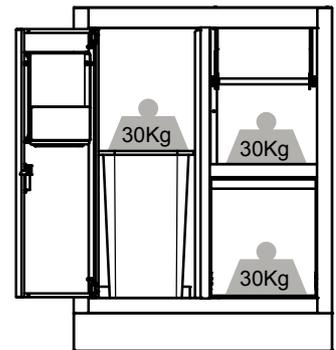


Trash Bin Cabinet  
Max 90Kg

# Installation options for Cabinets




**i** Important information: Please read before beginning installation.

- Layouts shown are only examples. Based on customer's purchase, cabinets can be configured in a variety of different layouts.
- Consider the location of electrical outlets when planning layout.

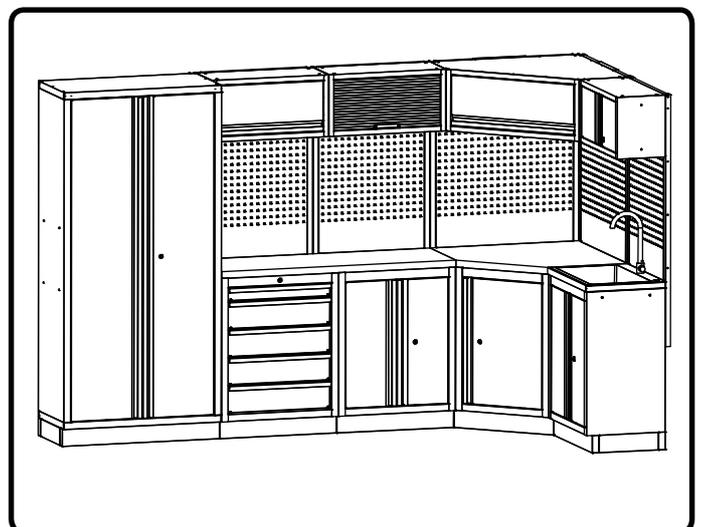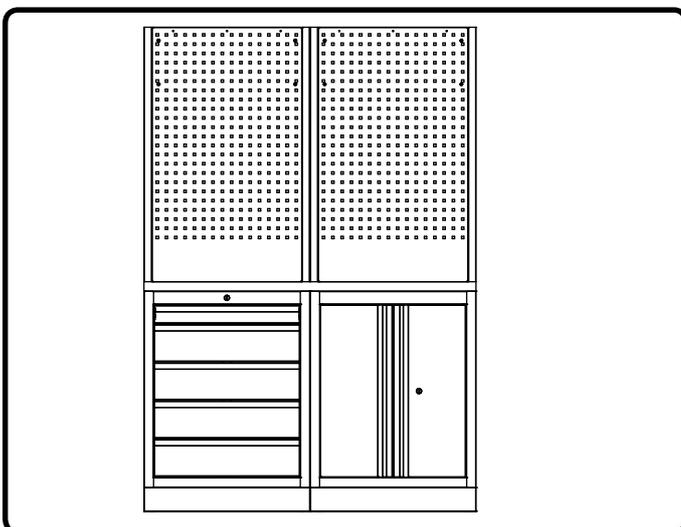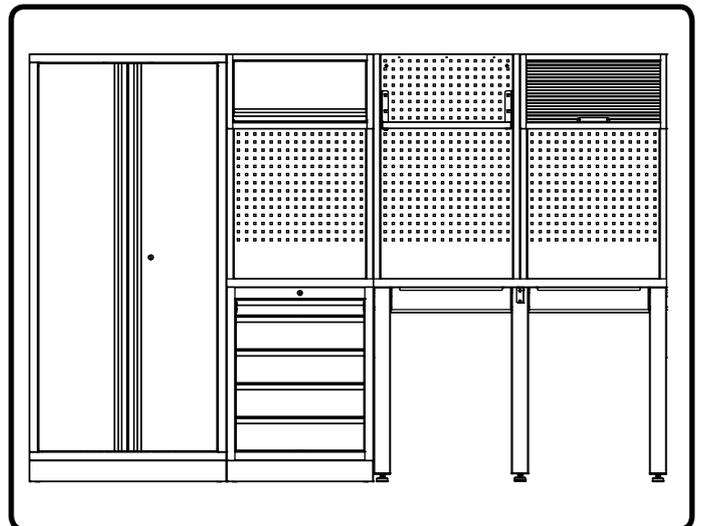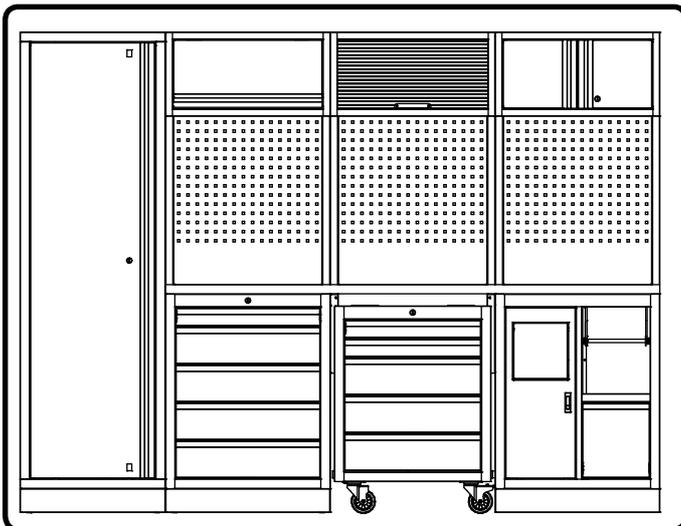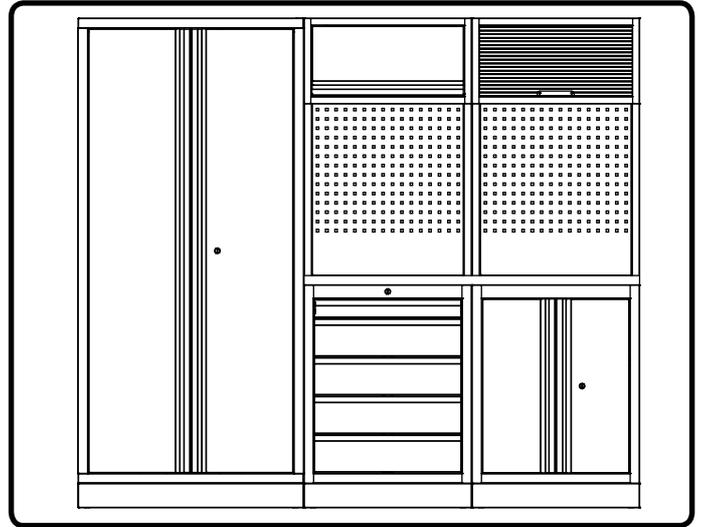


# Installing Optional accessory

**i** Begin by attaching the leveling feet (optional accessory).  
Please skip and turn to Page 5 if no leveling feet are purchased.

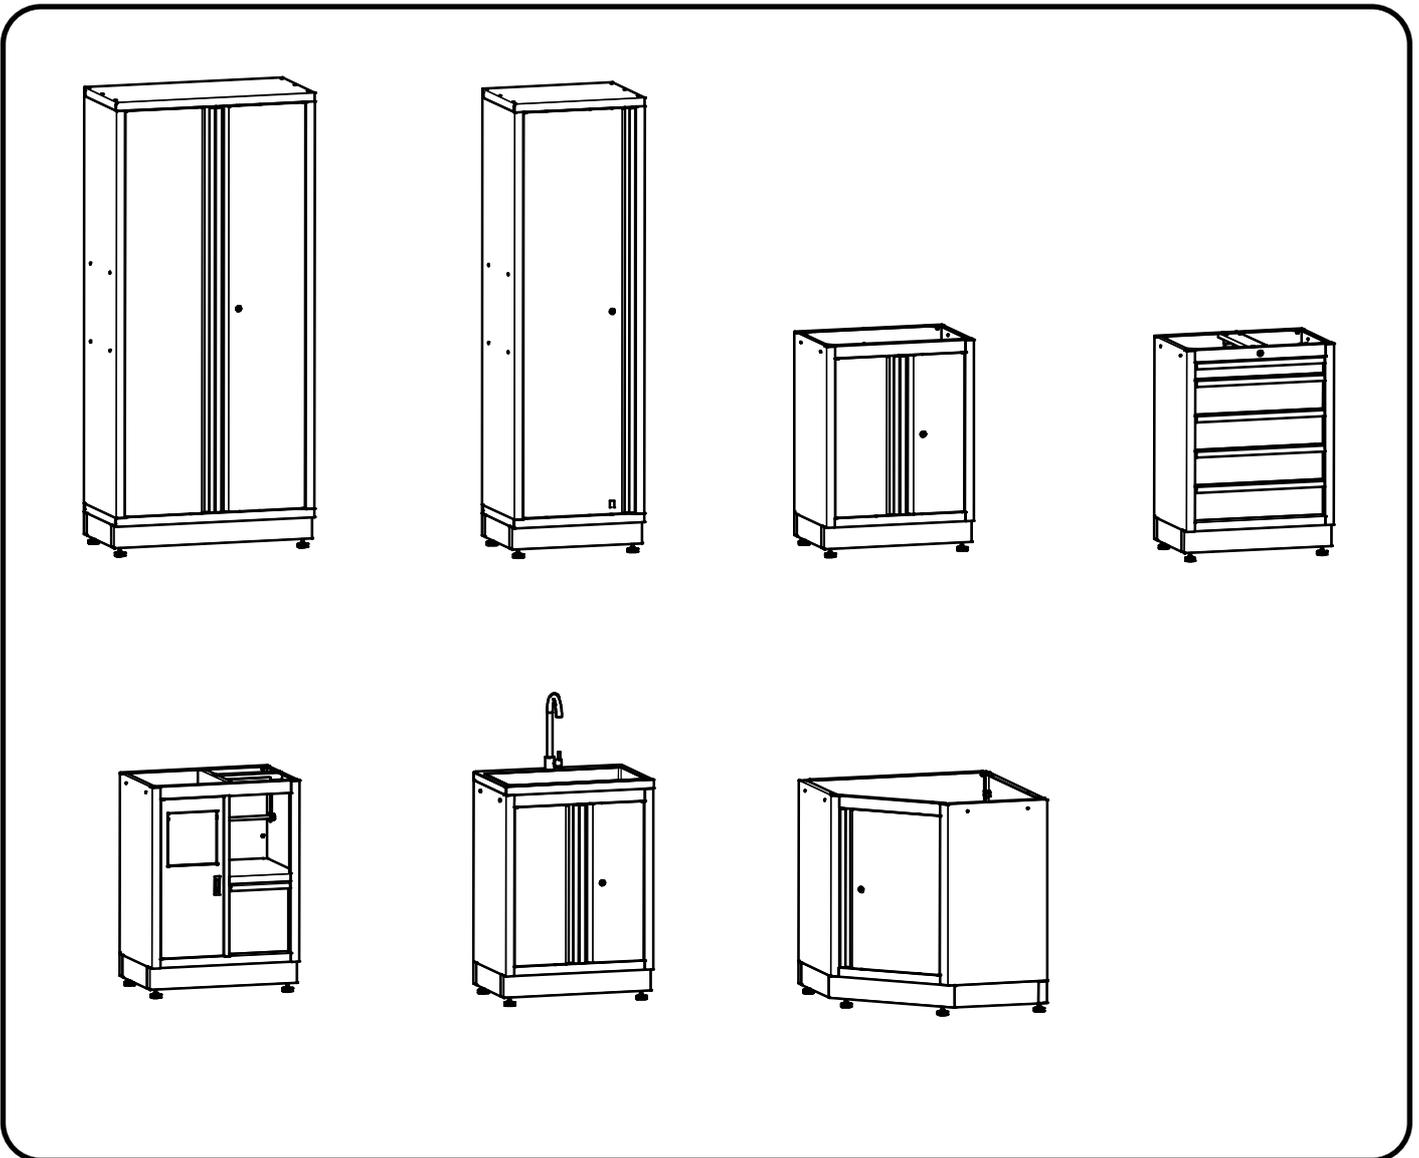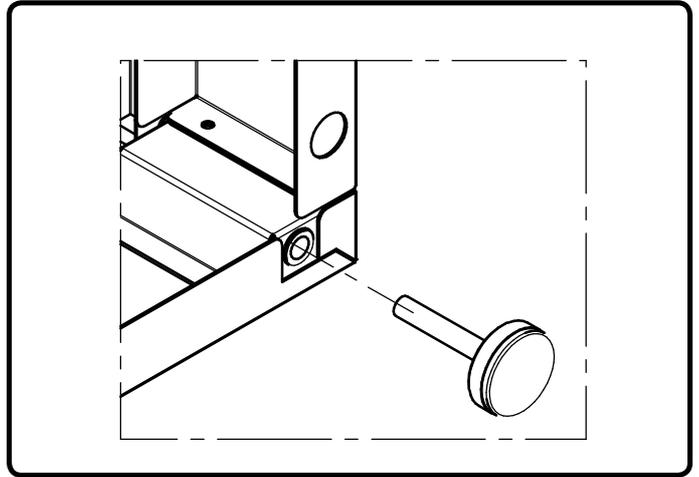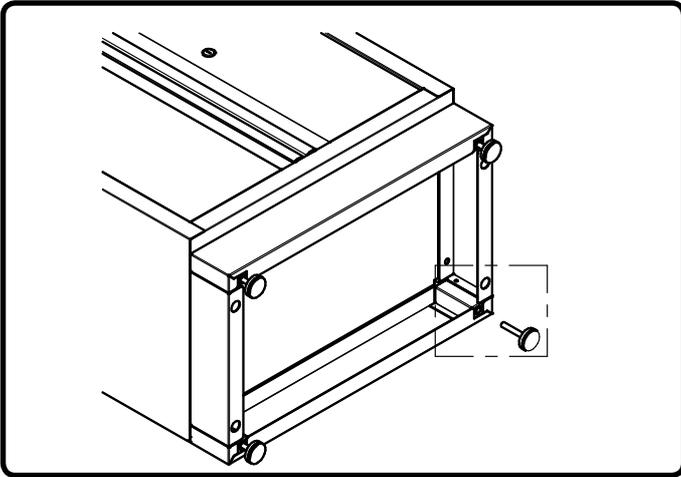

# Installing Pillars








**i** Hardwares Needed.



Hex Bolt  
(M6x16)




Nut  
(M6)

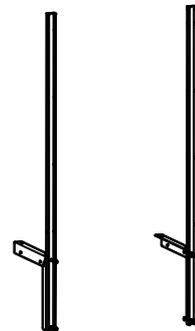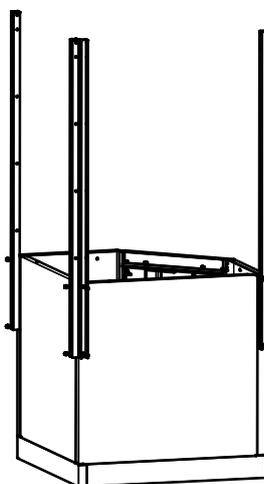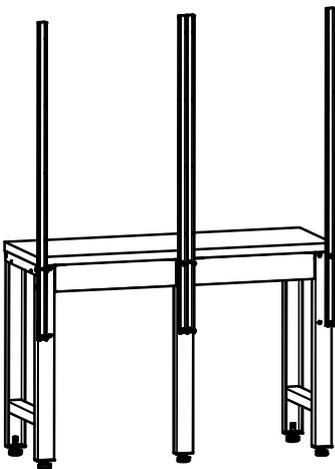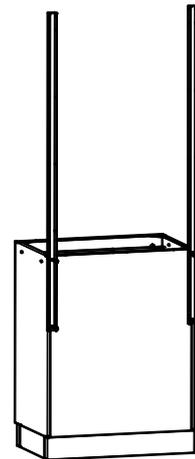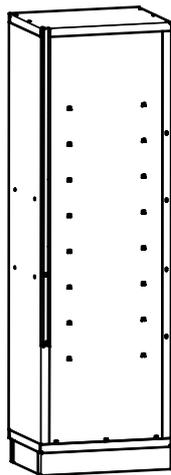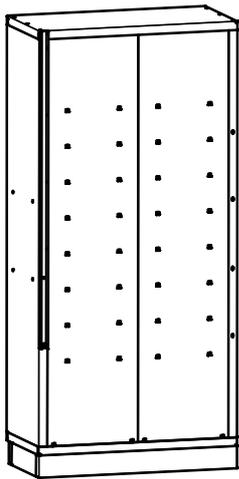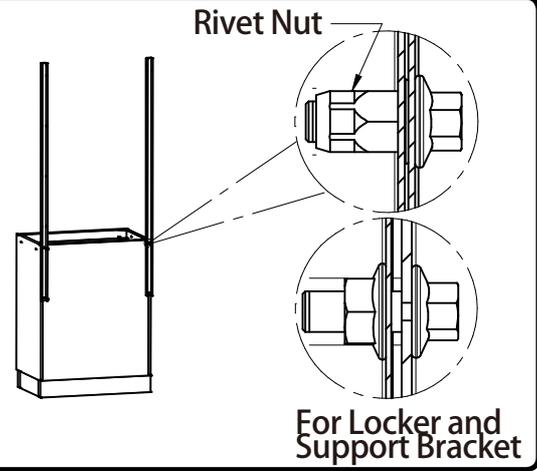

# Installing Hanging Panels









 Hardwares Needed.



Hex Bolt  
(M6x16)




Nut  
(M6)

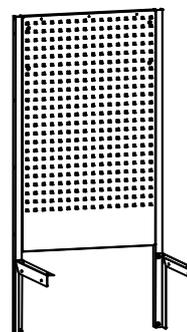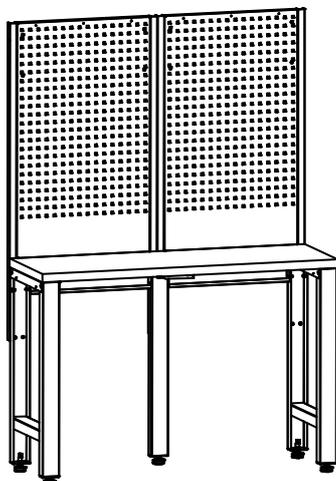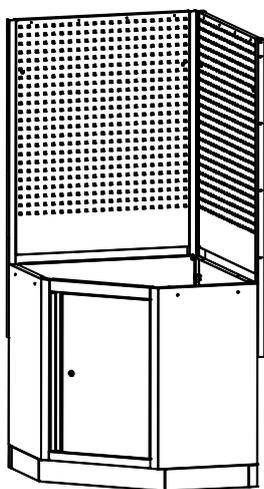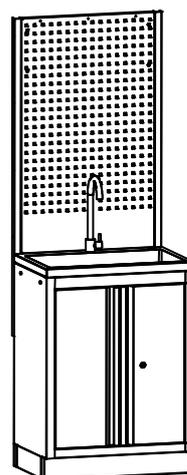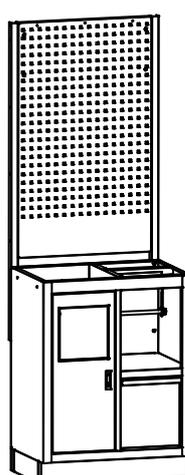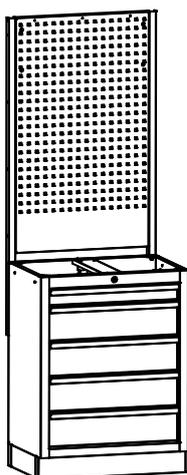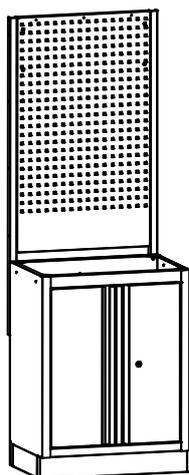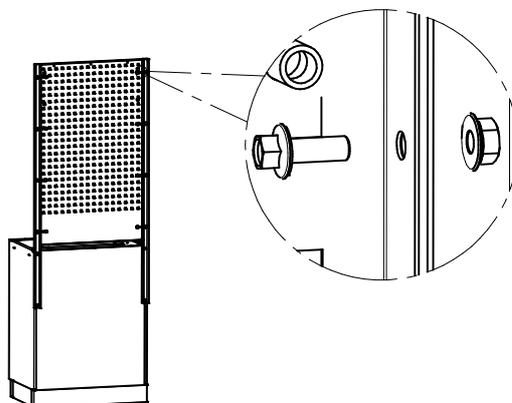


# Attaching Cabinets together

Position and secure remaining cabinets to wall. Install cabinets one at a time. Please adjust four leveling feet to make sure it's even to the ground.

## Hardwares Needed.




Hex Bolt  
(M6x16)




Nut  
(M6)


## Attach Locker and Base Cabinet

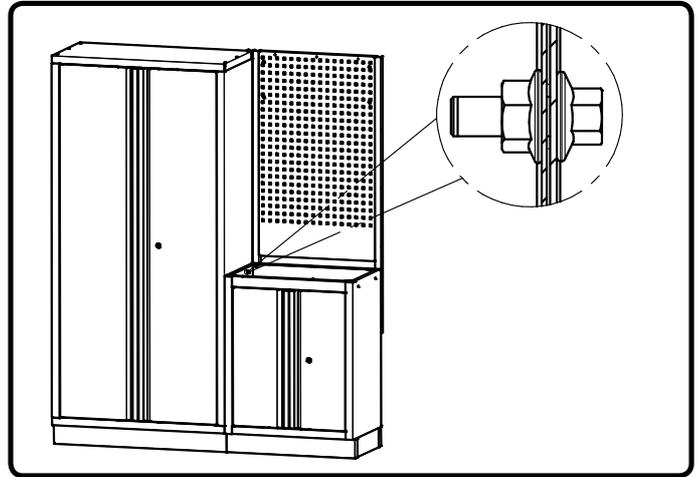


## Attach Drawer and Base Cabinets

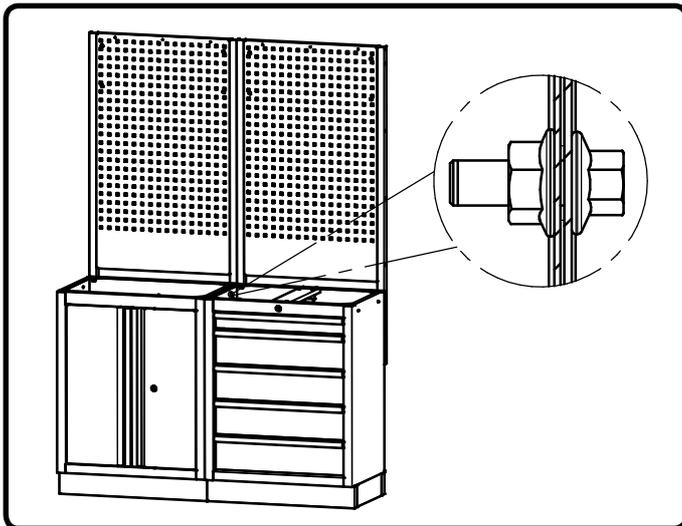


## Attach Sink and Base Cabinets

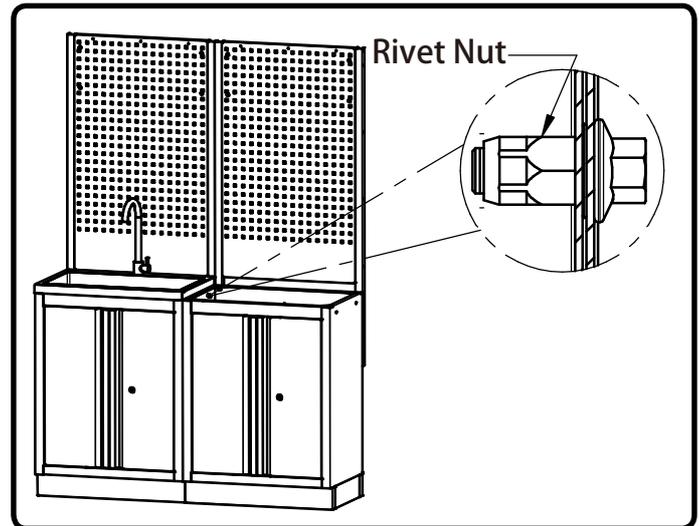

## Attach Corner and Base Cabinets

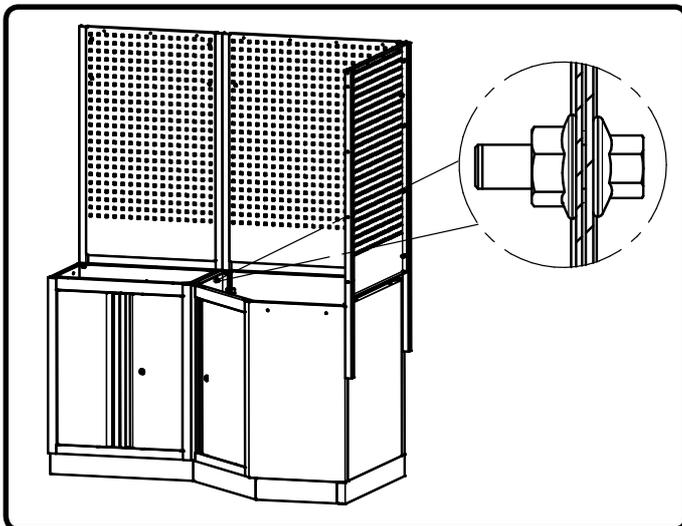


## Attach Base Cabinet and Support Brackets

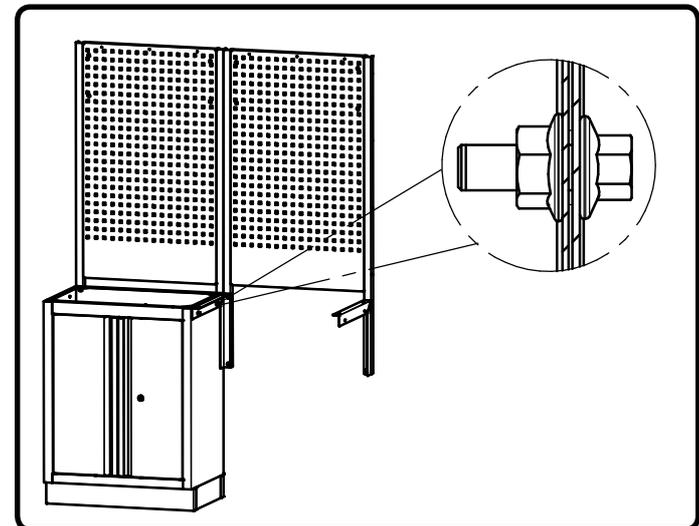


# Attaching Cabinets together


Attach Base Cabinet and Work Bench

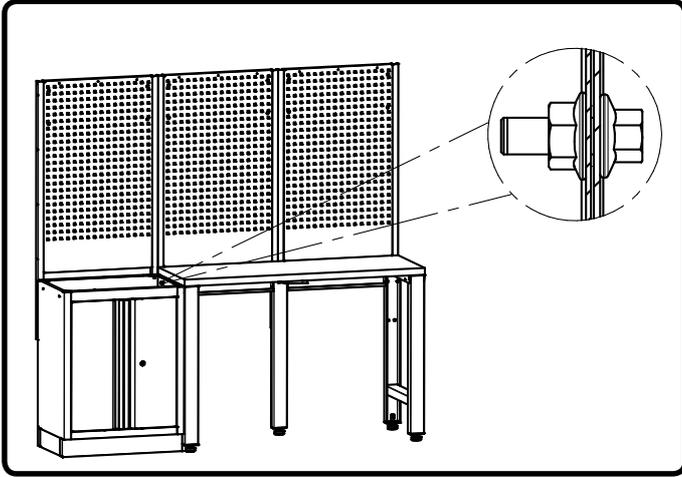


# Removing Drawers

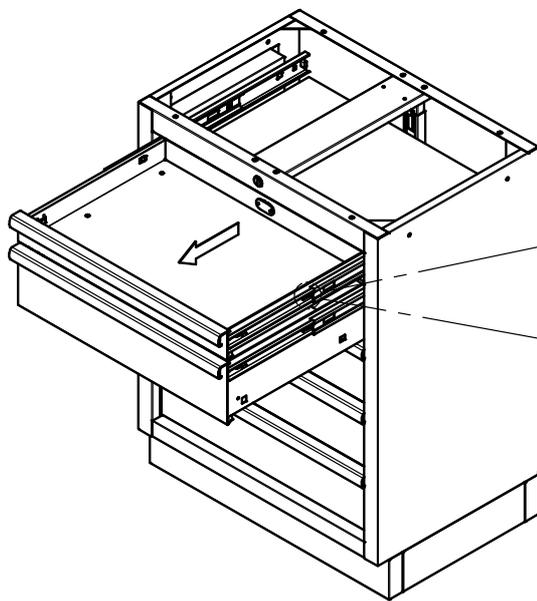

Left Side

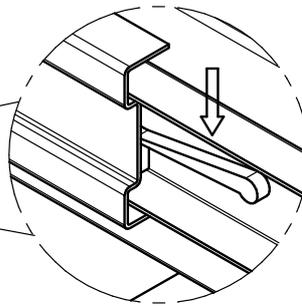


Right Side

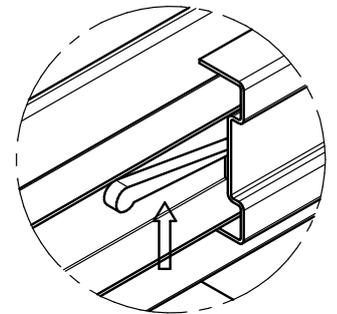

Press the drawer's side parts as shown simultaneously to remove the drawers.

# Mounting the Woktop





**i** Hardwares Needed.



Hex Bolt  
(M6x16)




Wood Screw  
(ST6x16)

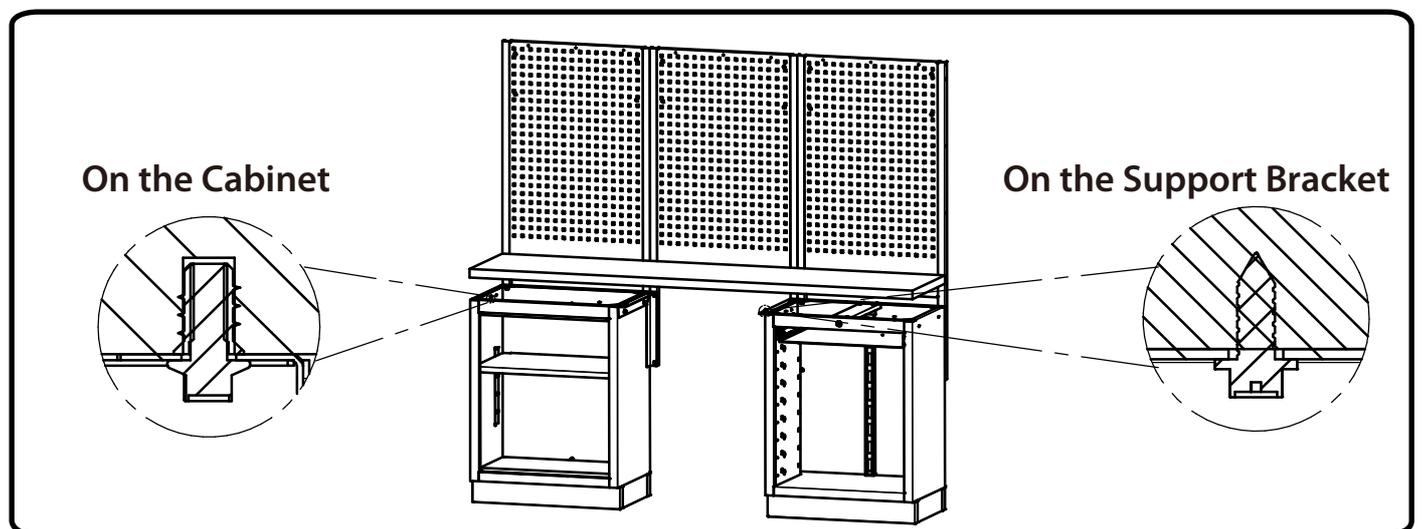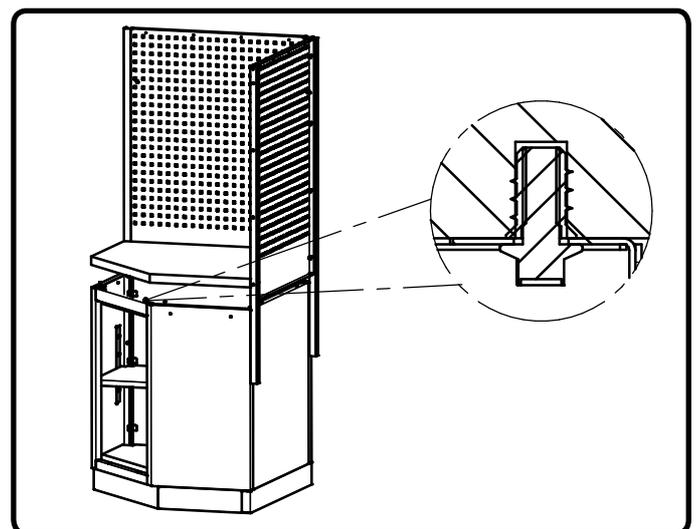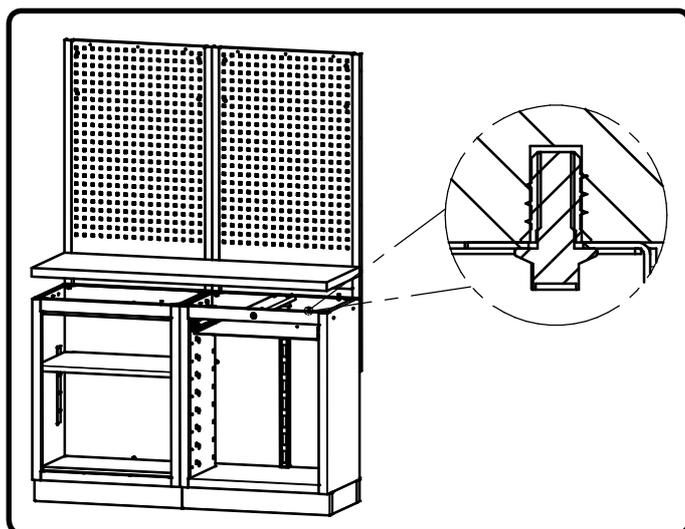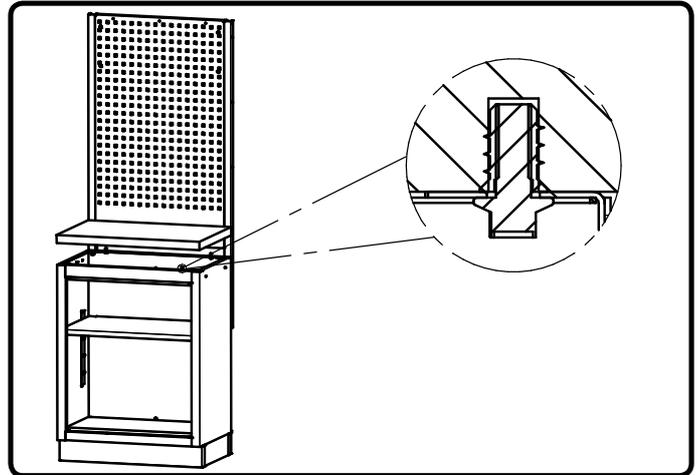

# Attaching Pillars together


**i** Hardwares Needed.




Hex Bolt  
(M6x16)



Nut  
(M6)

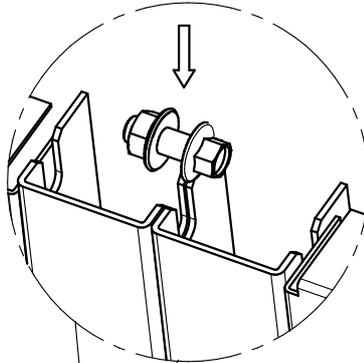


No need to fasten  
in the corner.

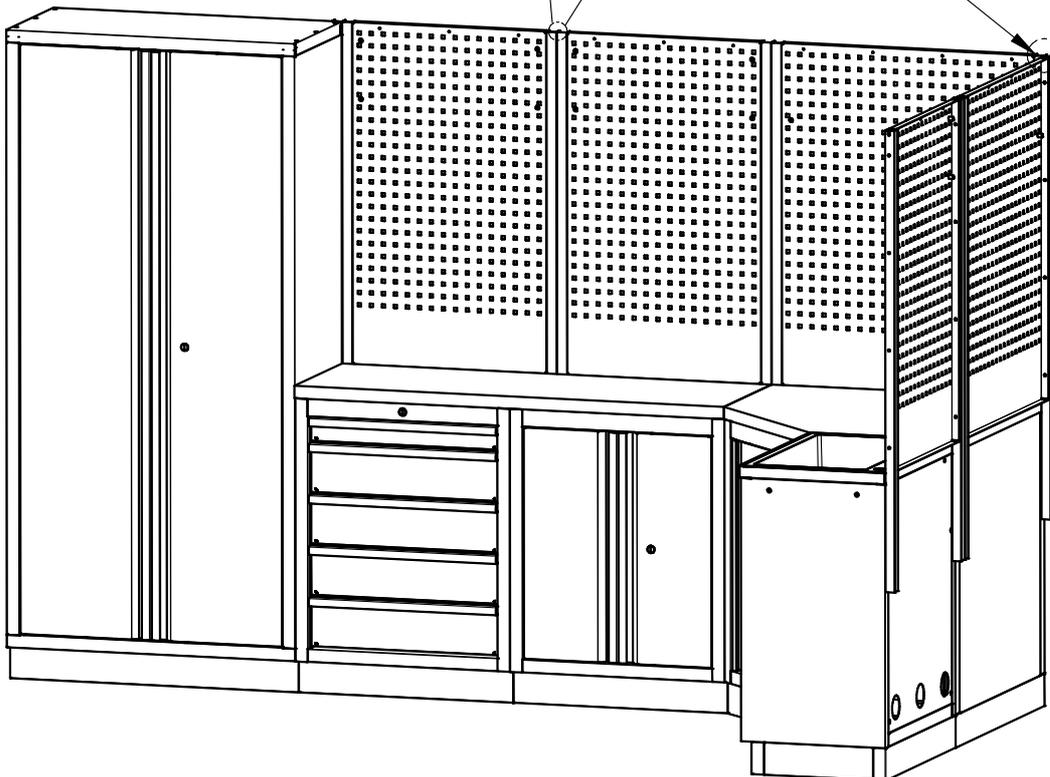


# Installing Wall Cabinet

## Hardwares Needed.



Hex Bolt  
(M8x16)




Washer  
(D8)



Spring Washer  
(D8)



Hex Bolt  
(M6x16)






Nut  
(M6)

Pre-assemble the Bolt  
and washer on the Panel




Hang on the Wall  
Cabinet and fasten  
the bolt.

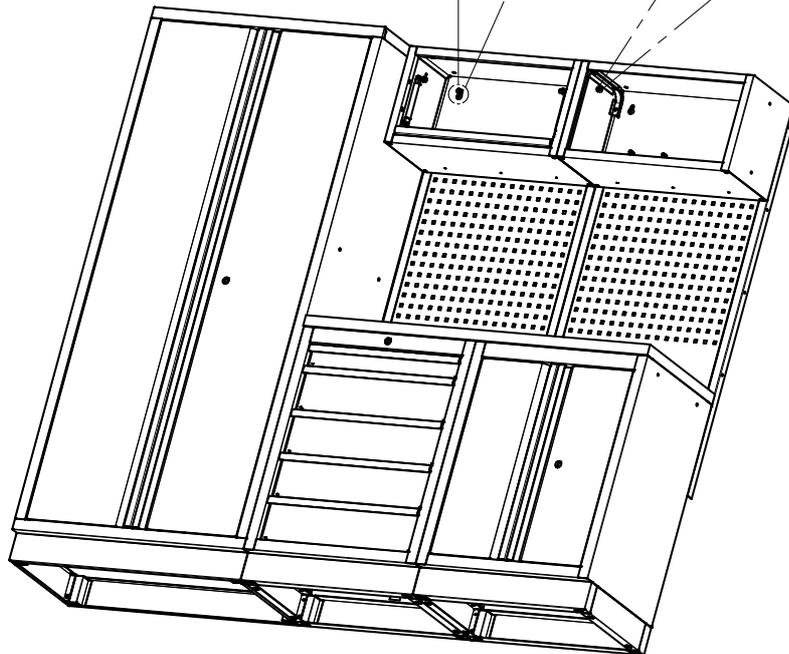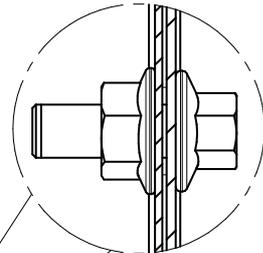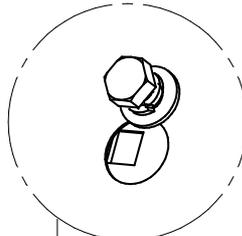


**NOTE:** This step is for 3 types of wall cabinet.

# Installing Corner Wall Cabinet

## Hardwares Needed.



Hex Bolt  
(M8x16)






Washer  
(D8)



Spring Washer  
(D8)



Sunk Screw  
(M6x16)

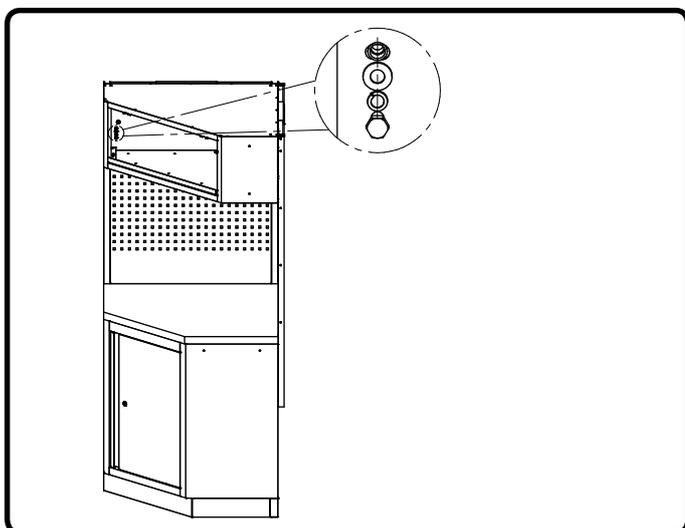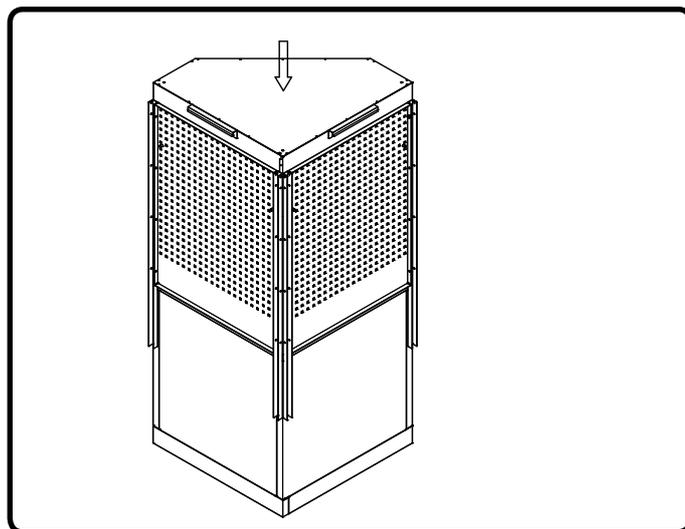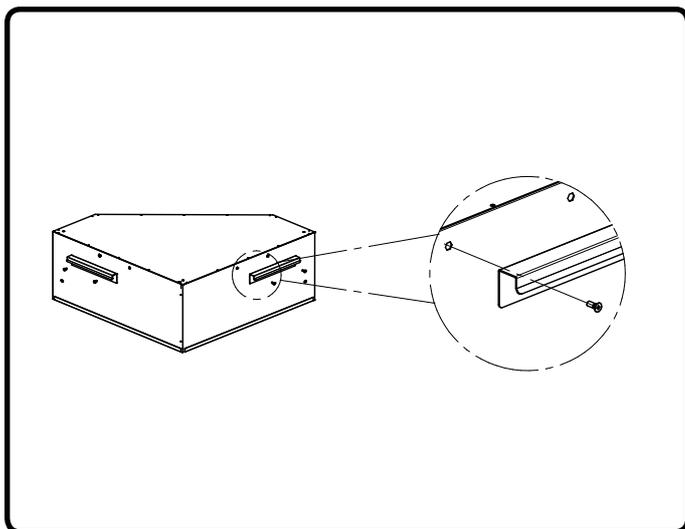

# Installing LED Lights (Optional Accessory)

Stick the LED Light to the bottom of Wall Cabinet.

