











# ASSEMBLY INSTRUCTION SHEET

## SOFA


### PARTS LIST

<b>A</b>	<b>BACK BOARD</b>		<b>1</b>	<b>E</b>	<b>BOLT (M8*35MM)</b>		<b>4</b>
<b>B</b>	<b>SEAT BOARD</b>		<b>1</b>	<b>F</b>	<b>BOLT (M8*45MM)</b>		<b>7</b>
<b>C</b>	<b>LEFT ARMREST</b>		<b>1</b>	<b>G</b>	<b>PLASTIC BOLT CAP</b>		<b>11</b>
<b>D</b>	<b>MID FEET</b>		<b>2</b>	<b>H</b>	<b>METAL WASHER</b>		<b>11</b>
				<b>I</b>	<b>ALLEN WRENCH</b>		<b>1</b>


#### Step 1

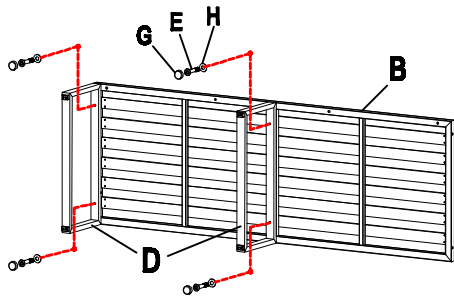

#### Step 2

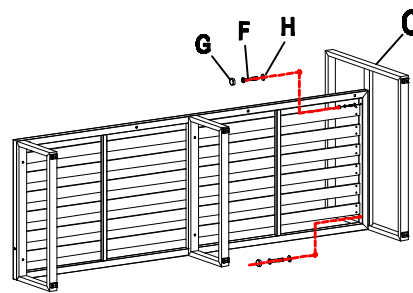

#### Step 3

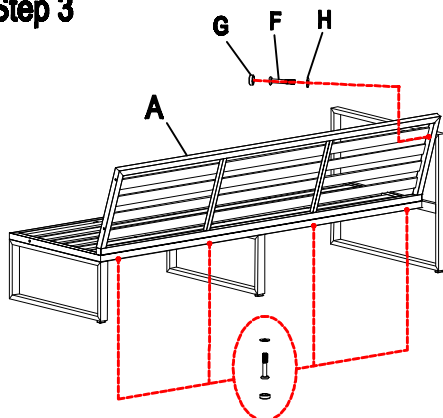

#### Step 4

