




Assembling Instruction




A:1PC



B:1PC



C:1PC



D:1PC



E:2PCS
M8*70mm







F:4PCS
M6*40mm




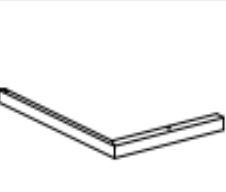
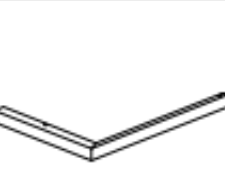







G:2PCS
M8*40mm

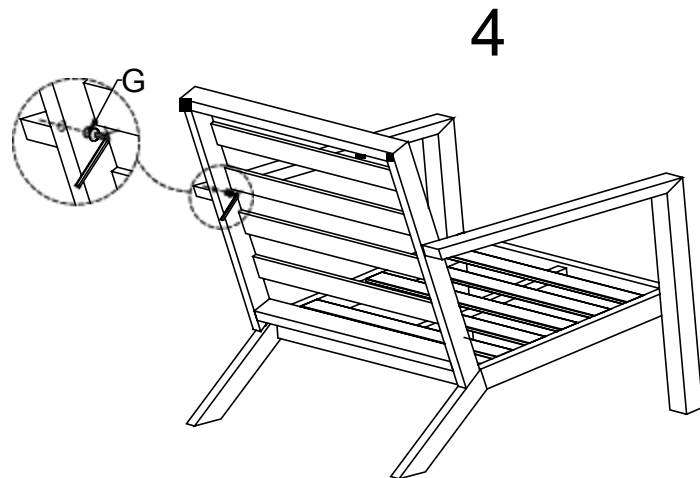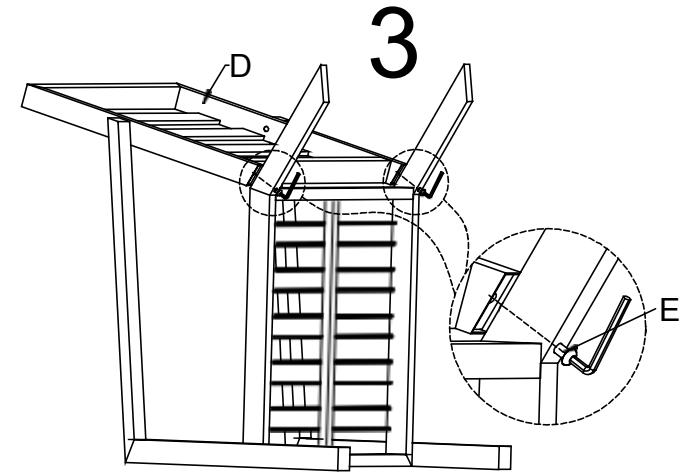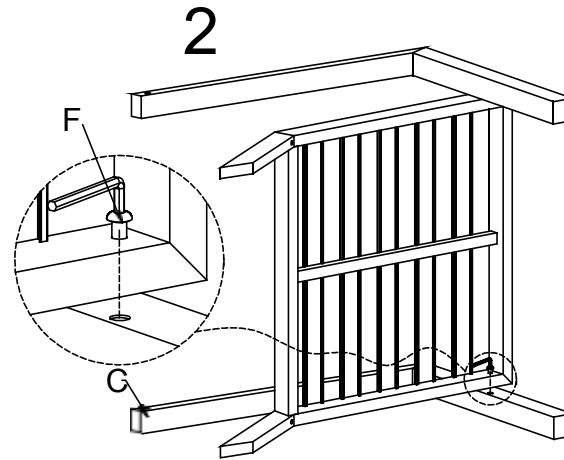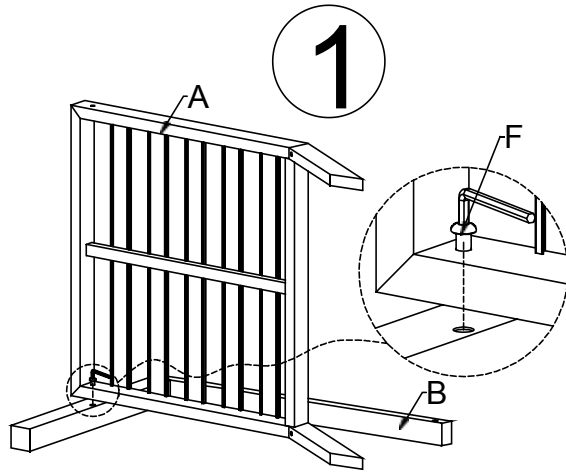


5mm
1PC




Assembling Instruction

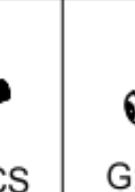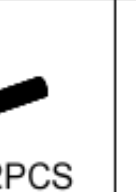
 A:1PC	 B:1PC	 C:1PC	 D:1PC	 I:1PC	 E:2PCS M8*70mm	 F:4PCS M6*40mm	 G:2PCS M8*40mm	 H:4PCS M6*20mm	 5mm D:1PC
--	---	---	--	---	---	---	---	---	--

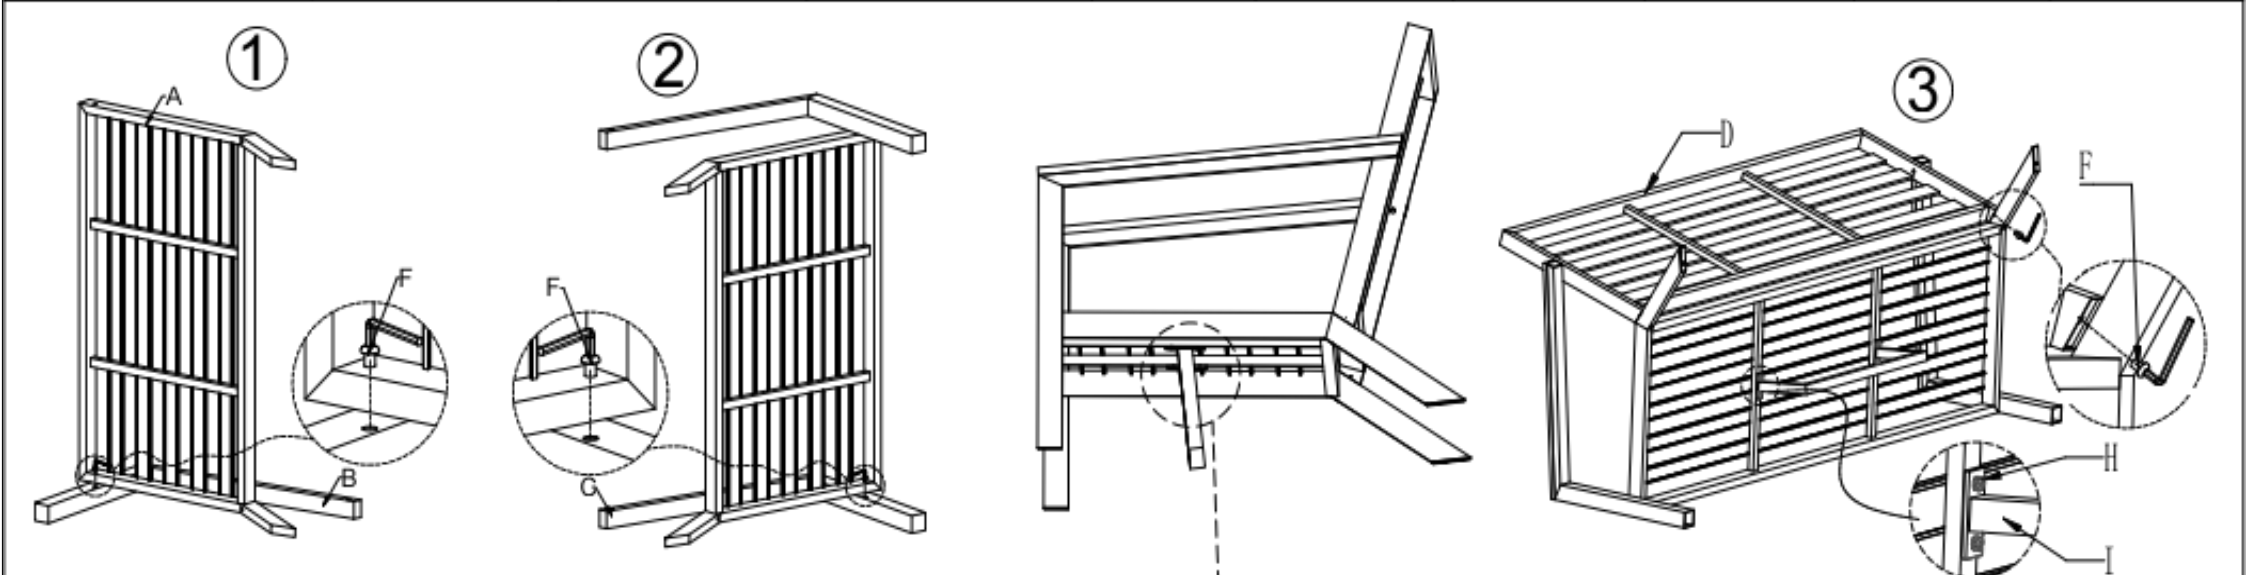


When installing the middle feet, please be sure to keep it horizontal and vertical with the ground.

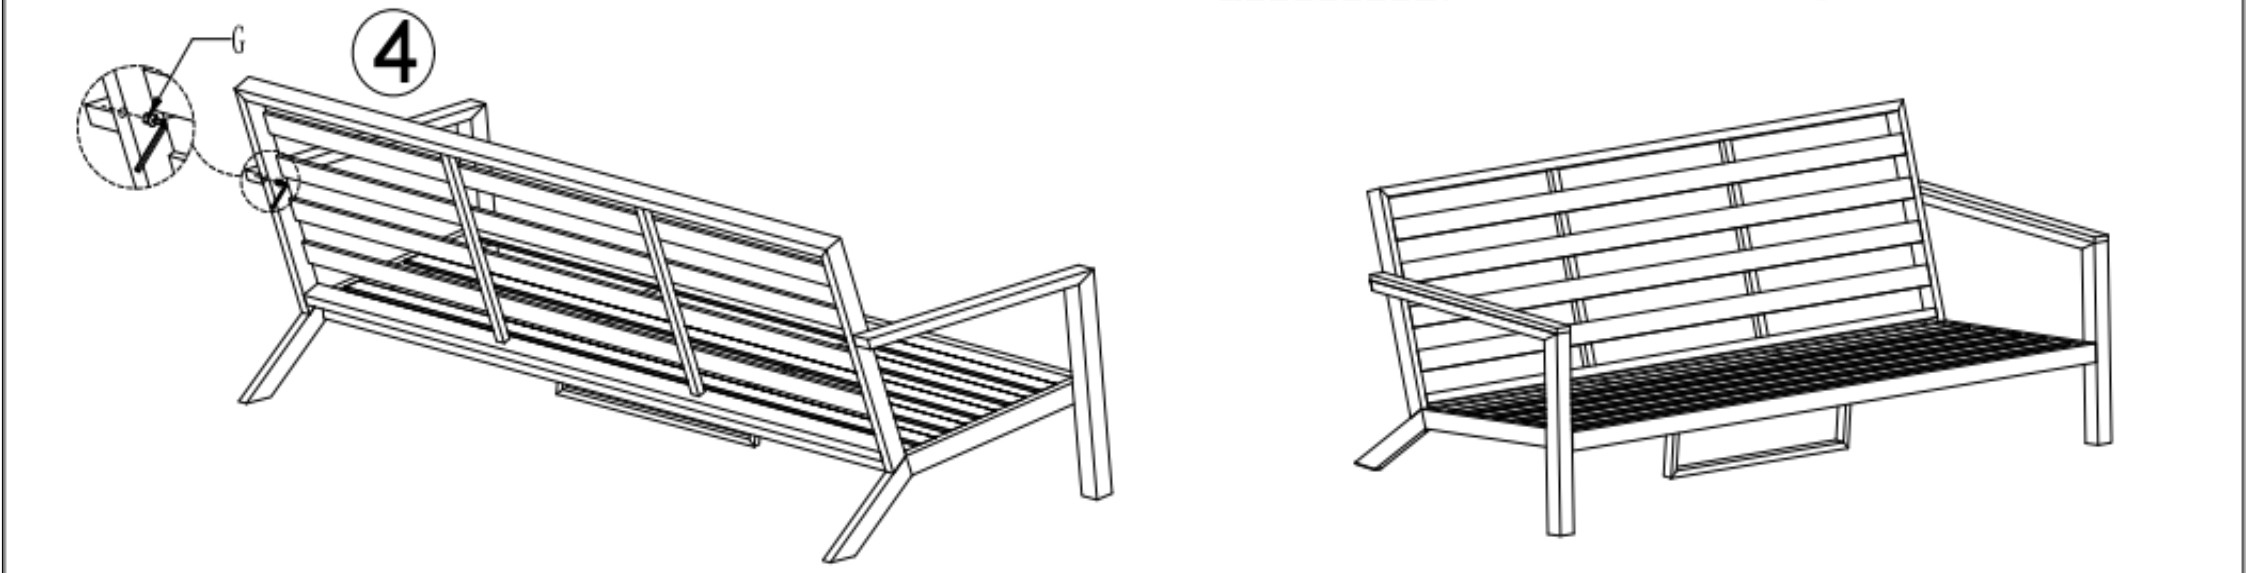

Assembling Instruction

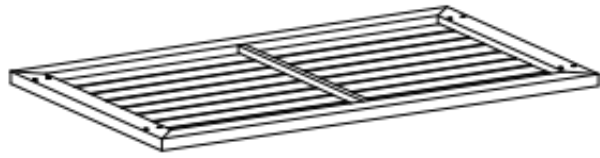

A:1PC

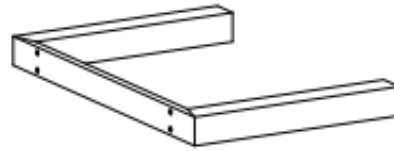

B:2PCS



C:8PCS
M6*30mm



D:1PC

