





Ref	Desc	Qty
A	M8x60	1 Pc
B1	M8x50	2Pcs
B2	M8x65	2Pcs
C	M8x20	8 Pcs
D		2 Pcs
E		2 Pcs
F		2 Pcs
G		1 Pc
H	M8x60	4 Pcs
I		2 Pcs
J		2 Pcs

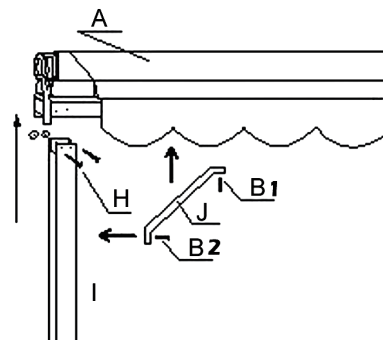


1. Using M8X60(H)screws, assemble the (A) and (I).

2. Using screws M8x50(B1) and M8x65(B2), assemble the elements (A), (I) and (J).

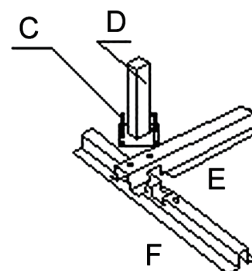


3. Using M8x20(C)screws, assemble the (D), (E) and (F).

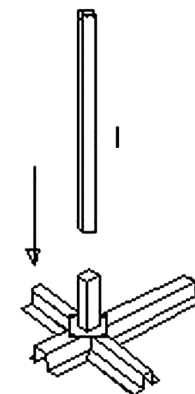

4. Insert the item (I) into the element (D).

5. Do the same for the other side.

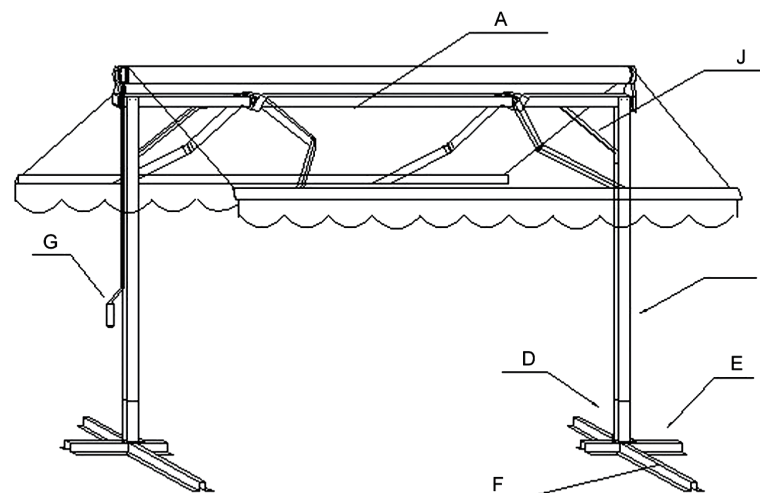


6. Assemble the element (G) on the set.

7. You have completed the assembly of your awning.



ATTENTION ! Keep this product away from heat and flames.
Do not use this product in the rain or in high winds.
Do not leave leaves or water on the roof for too long. Make sure the place where you install the blind is strong enough to support the weight of the product.
Store your blind indoors in a covered area during the Winter to increase its lifespan.

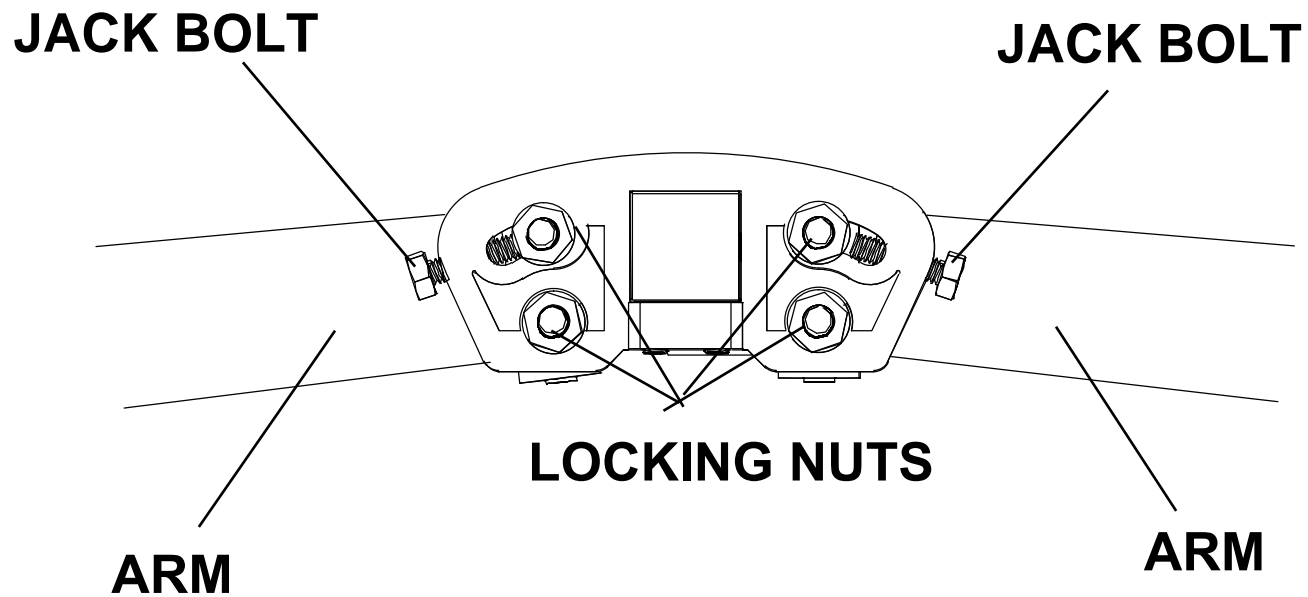

- 1.Loosen the locking nuts.**
- 2.Turn the jack bolt to adjust pitch.**
- 3.Adjust the arm until the front side is level.**
- 4.Tighten the locking nuts.**