





FLOOR CABINET




TOOLS




PARTS LIST

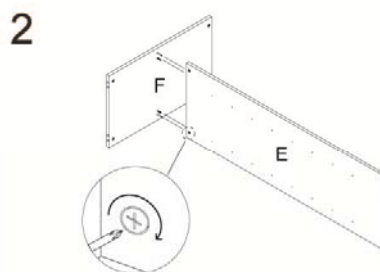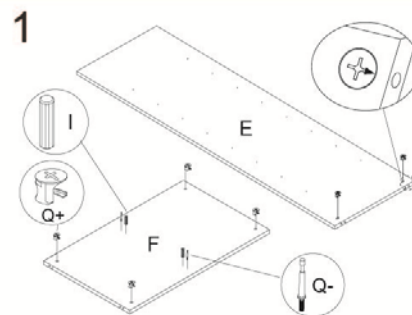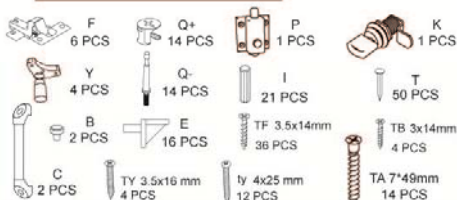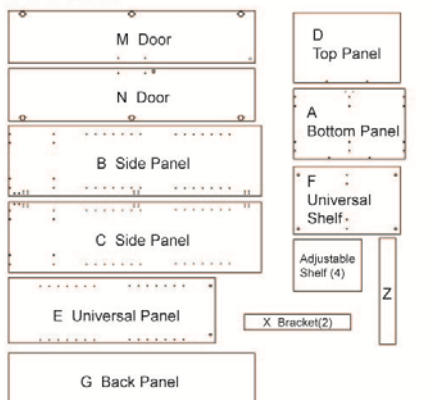


Fasten panels together and make sure all cams are locked.

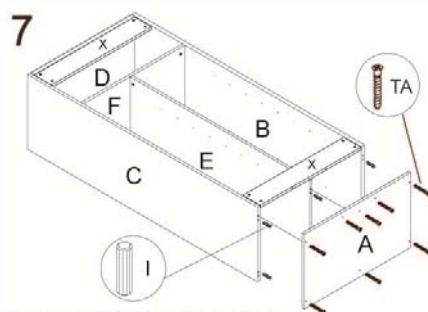


Fasten panels together and make sure all cams are locked.

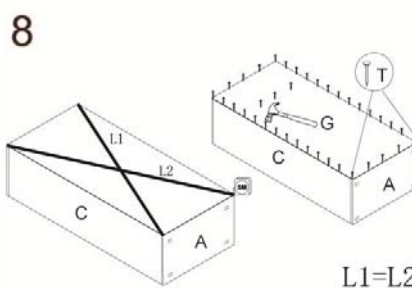




L1=L2

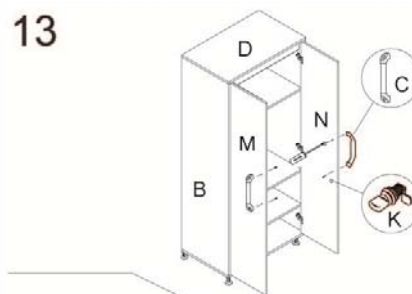



ADJUST THE DOOR INWARD AND OUTWARD

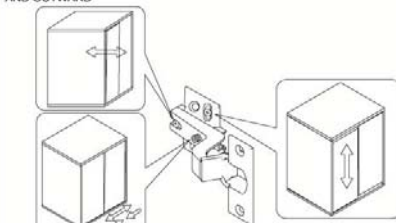




ADJUST GAPS BETWEEN DOORS
FINAL HINGE ADJUSTMENT

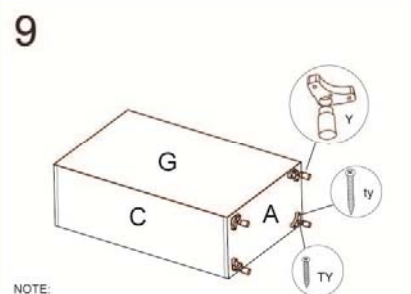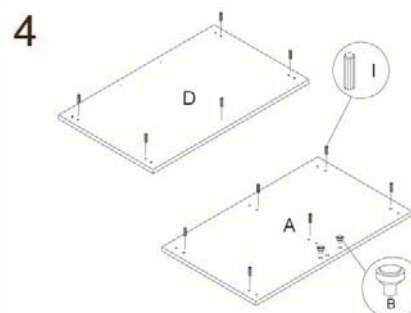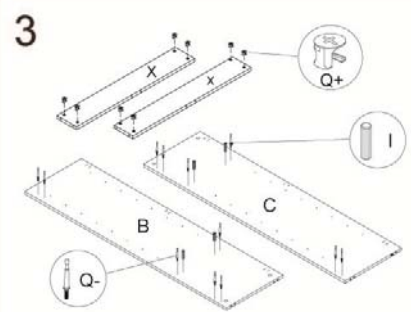

NOTE:
BE VERY CAREFUL LIFTING CABINET

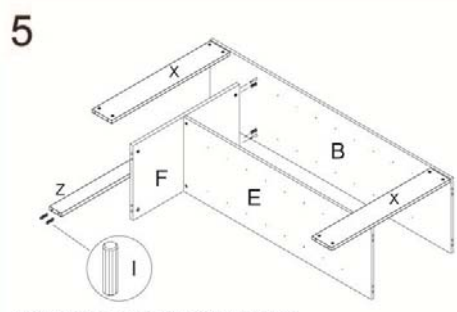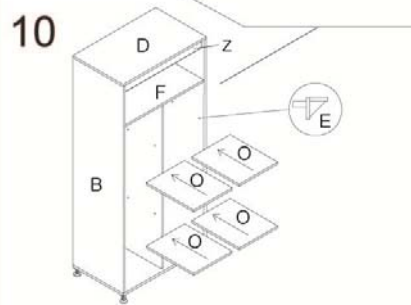

Fasten panels together and make sure all cams are locked.

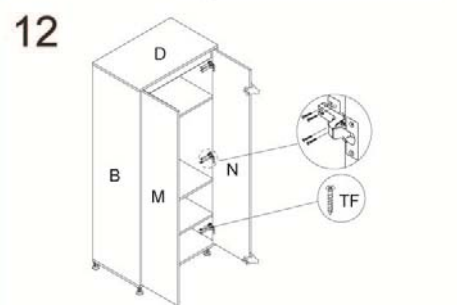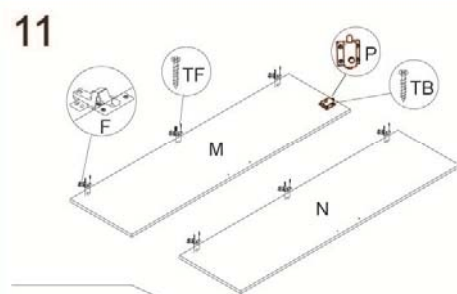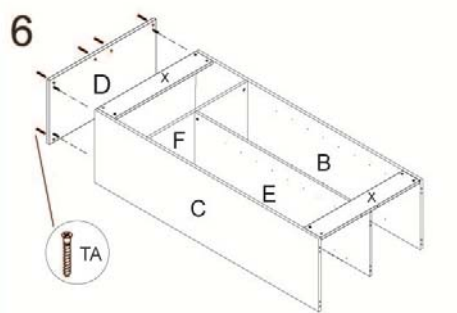

FLOOR CABINET





1018B




TOOLS




PARTS LIST

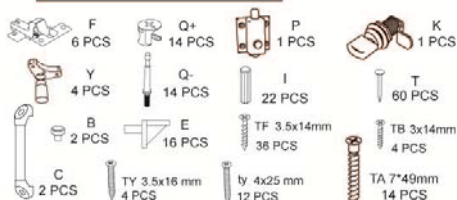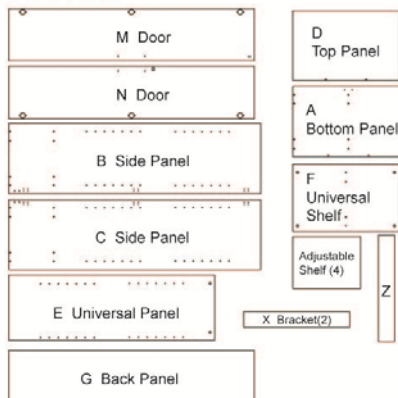

1

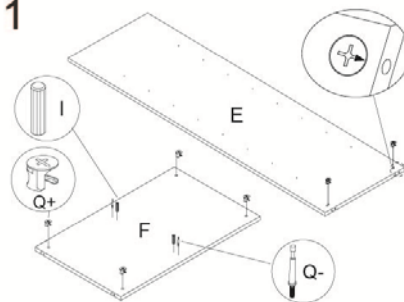


2

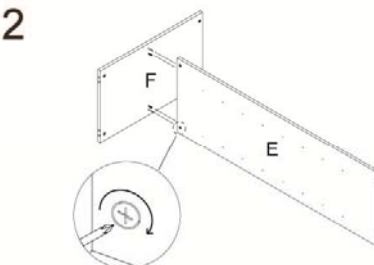


Fasten panels together and make sure all cams are locked.

3

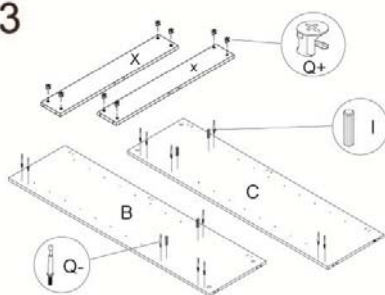


5

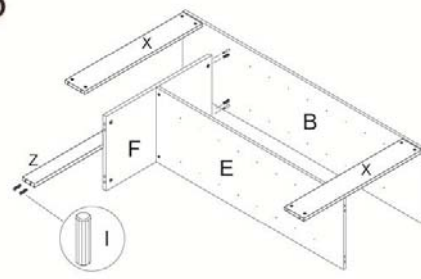


Fasten panels together and make sure all cams are locked.

7

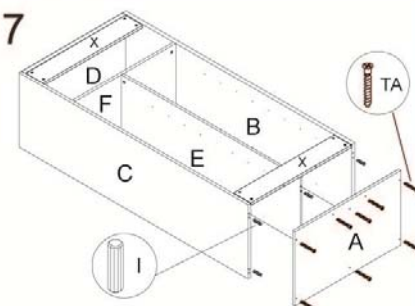


Fasten panels together and make sure all cams are locked.


4

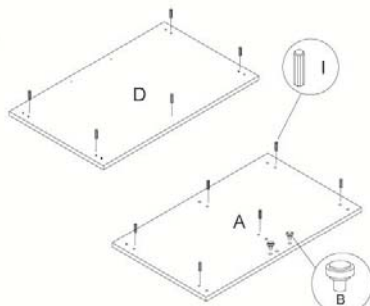

6

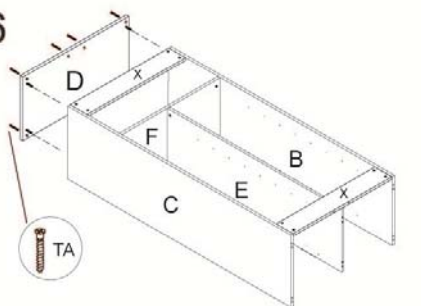


8

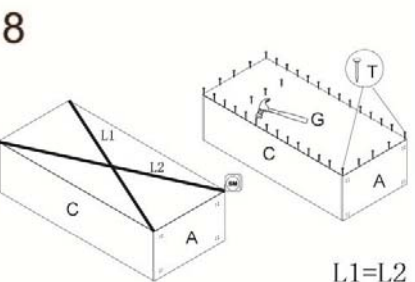


L1=L2

9

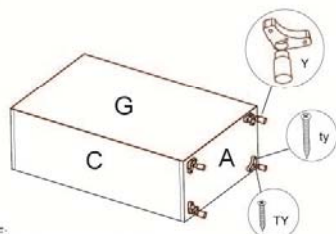


NOTE:
BE VERY CAREFUL LIFTING CABINET


10

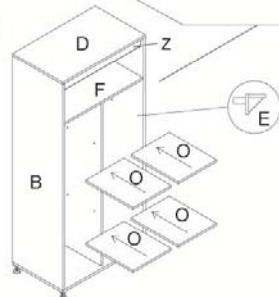


11

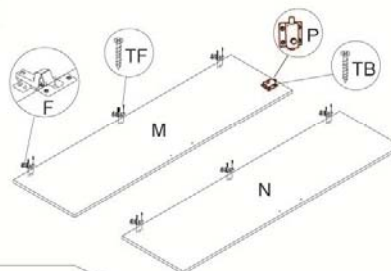


12

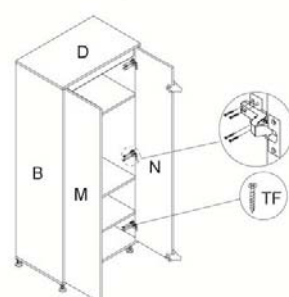

13

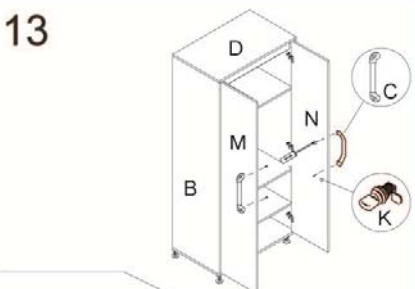

ADJUST THE DOOR INWARD
AND OUTWARD

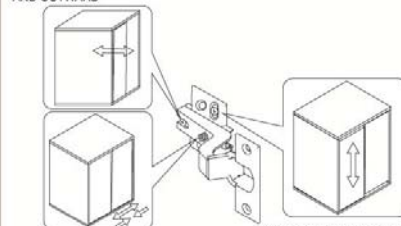

ADJUST GAPS BETWEEN
DOORS
FINAL HINGE ADJUSTMENT

3 DRAWER CABINET




1018D


TOOLS




PARTS LIST

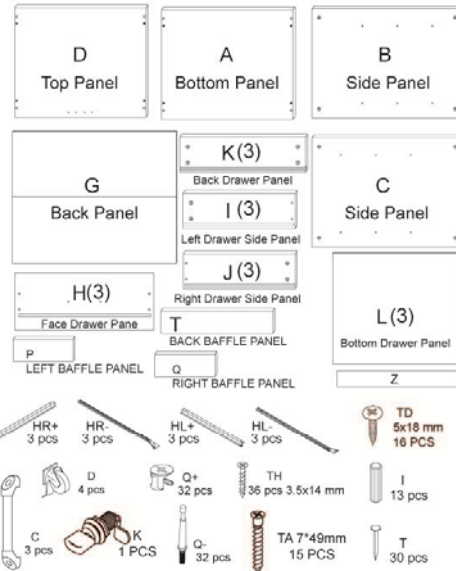


1

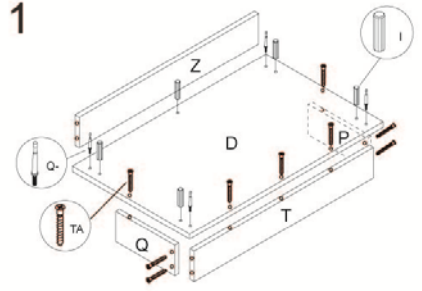


2

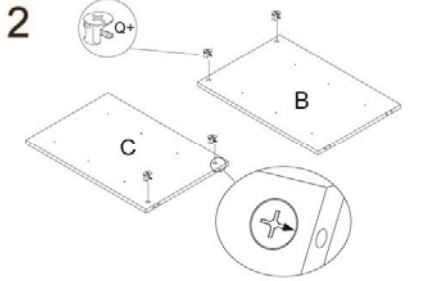


3

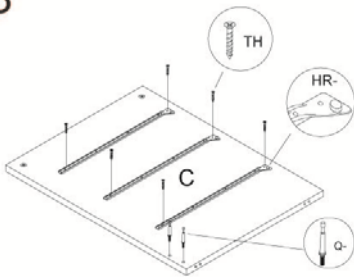


5

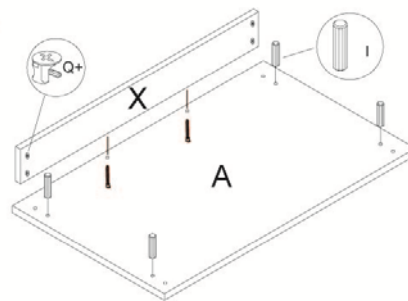


7

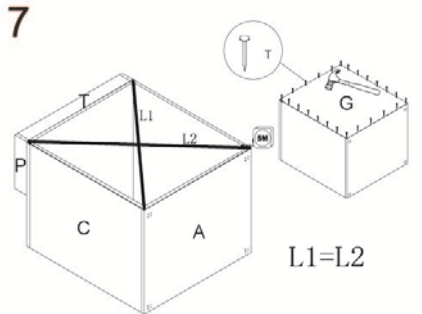


4

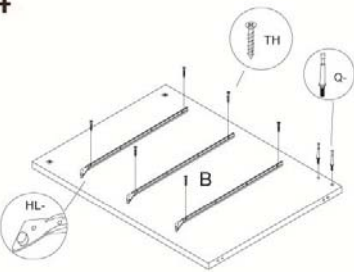


6

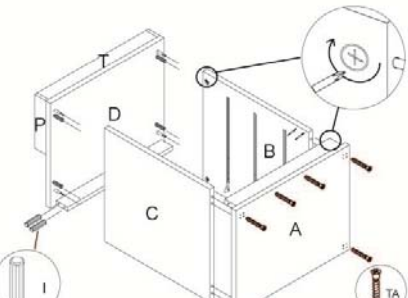

8

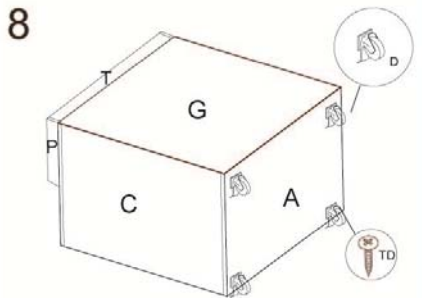


9

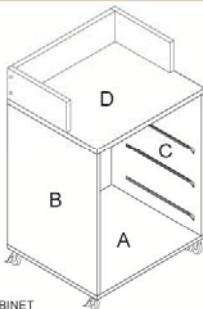


NOTE:
BE VERY CAREFUL LIFTING CABINET


10

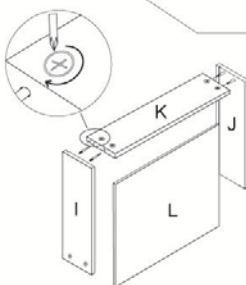


11

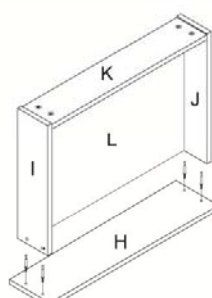

12

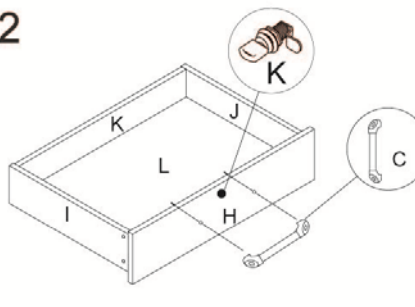

13

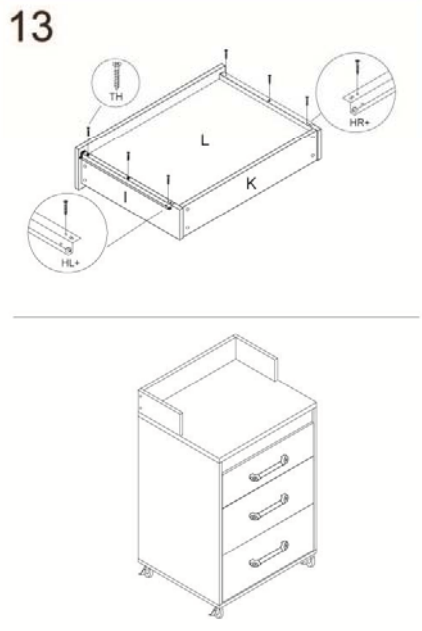


DOOR CABINET





1018F


Tools Needed

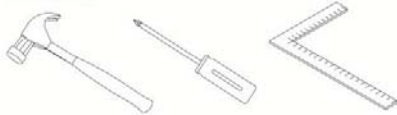


PARTS LIST

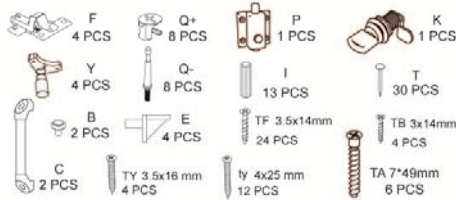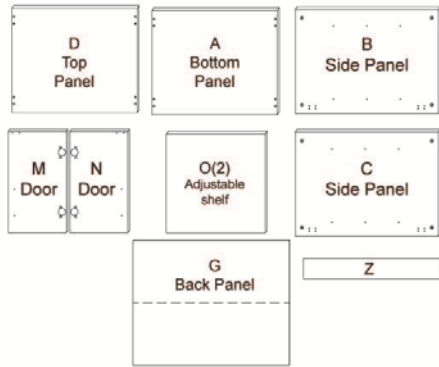


1

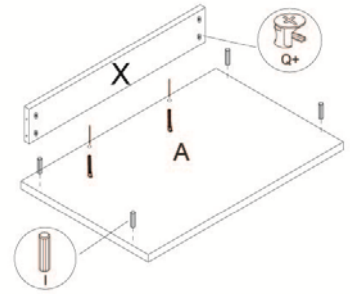


2

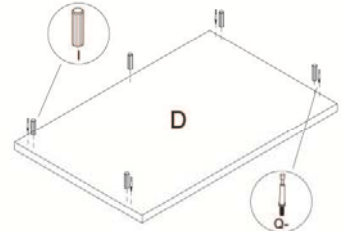

3

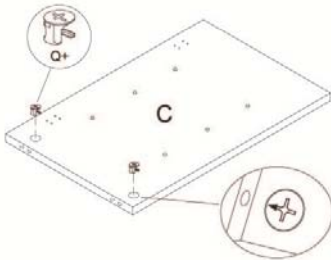


5

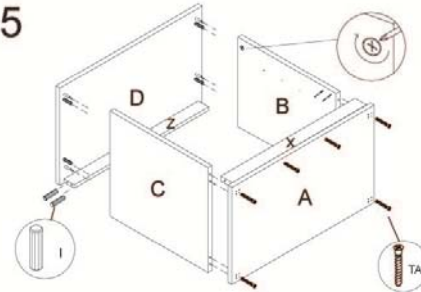


Fasten panels together and make sure all cams are locked.

7

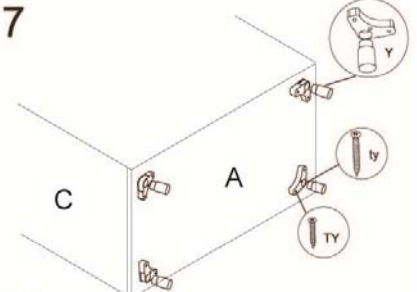


NOTE:
BE VERY CAREFUL LIFTING CABINET.

4

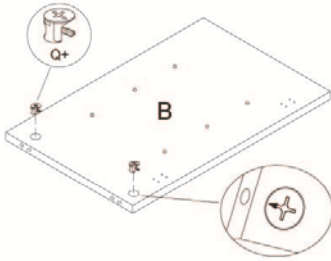


6

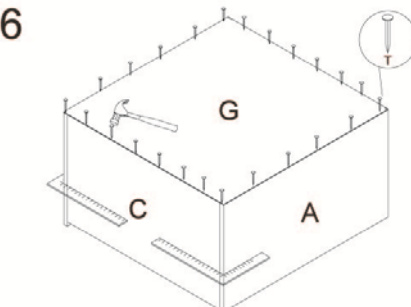


Fasten panels together and make sure all cams are locked.

8

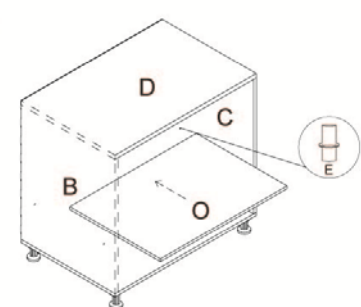


9

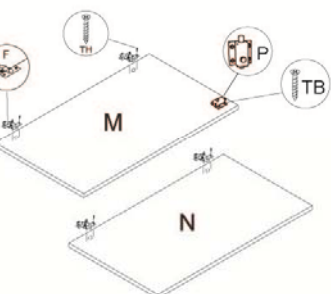


11



10

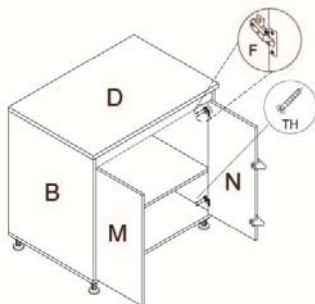


12

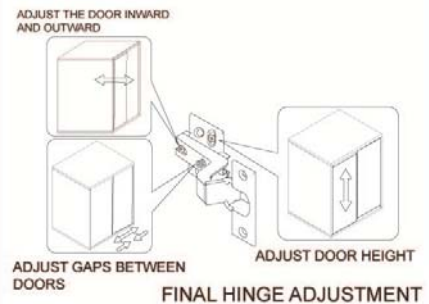

ADJUST THE DOOR INWARD AND OUTWARD
ADJUST GAPS BETWEEN DOORS
ADJUST DOOR HEIGHT
FINAL HINGE ADJUSTMENT

WALL CABINET


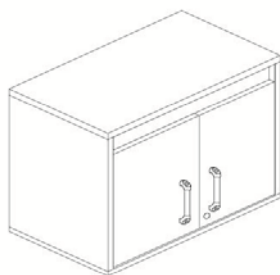


1018K


TOOLS




PARTS LIST

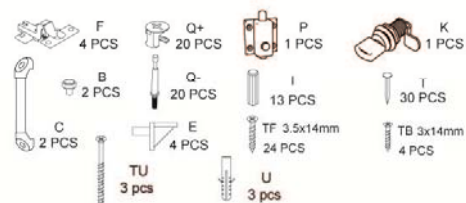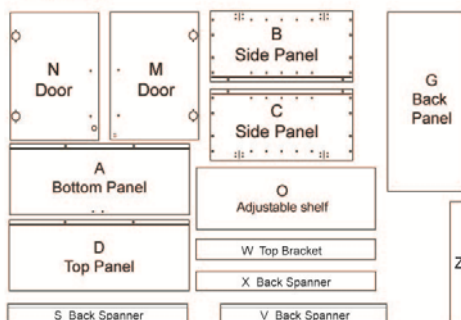


1

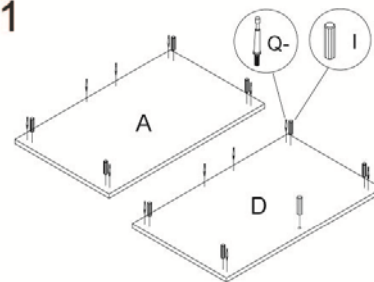


2

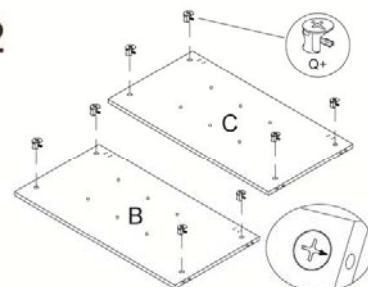


3

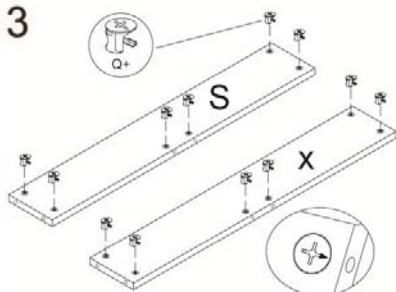


5

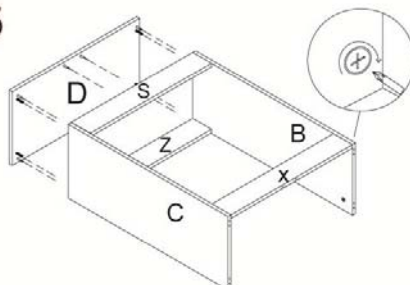


7

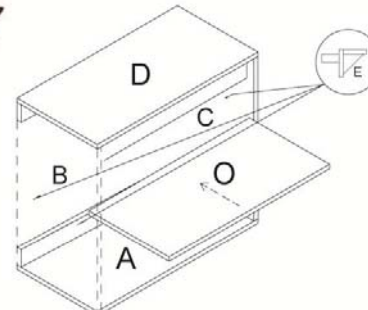


4

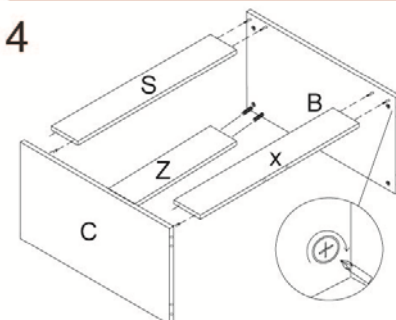


6

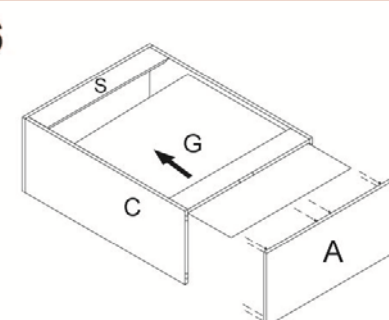


8

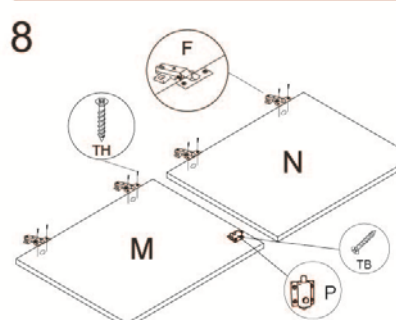

9

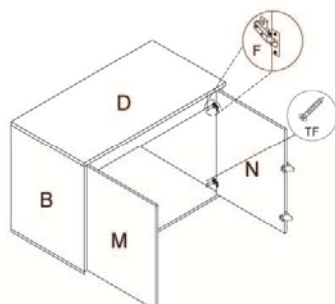


10

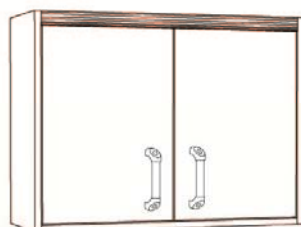


Fixing:

Note: DO NOT FIX IN MORTAR must be located and fixed to. 4 fixing points required; as per drawing drill holes through the center of guide holes suggest $\phi 5mm$.

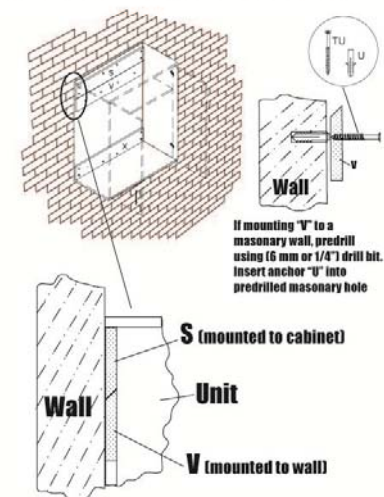

ADJUST THE DOOR INWARD AND OUTWARD

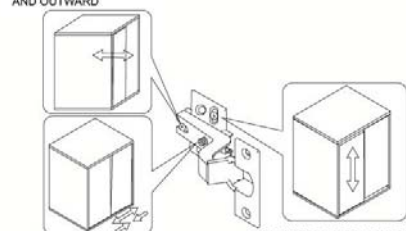

ADJUST GAPS BETWEEN DOORS ADJUST DOOR HEIGHT FINAL HINGE ADJUSTMENT