


WET&DRY VACUUM CLEANER

INSTRUCTION MANUAL



●Please read the manual clearly before your using and keep it properly for future using

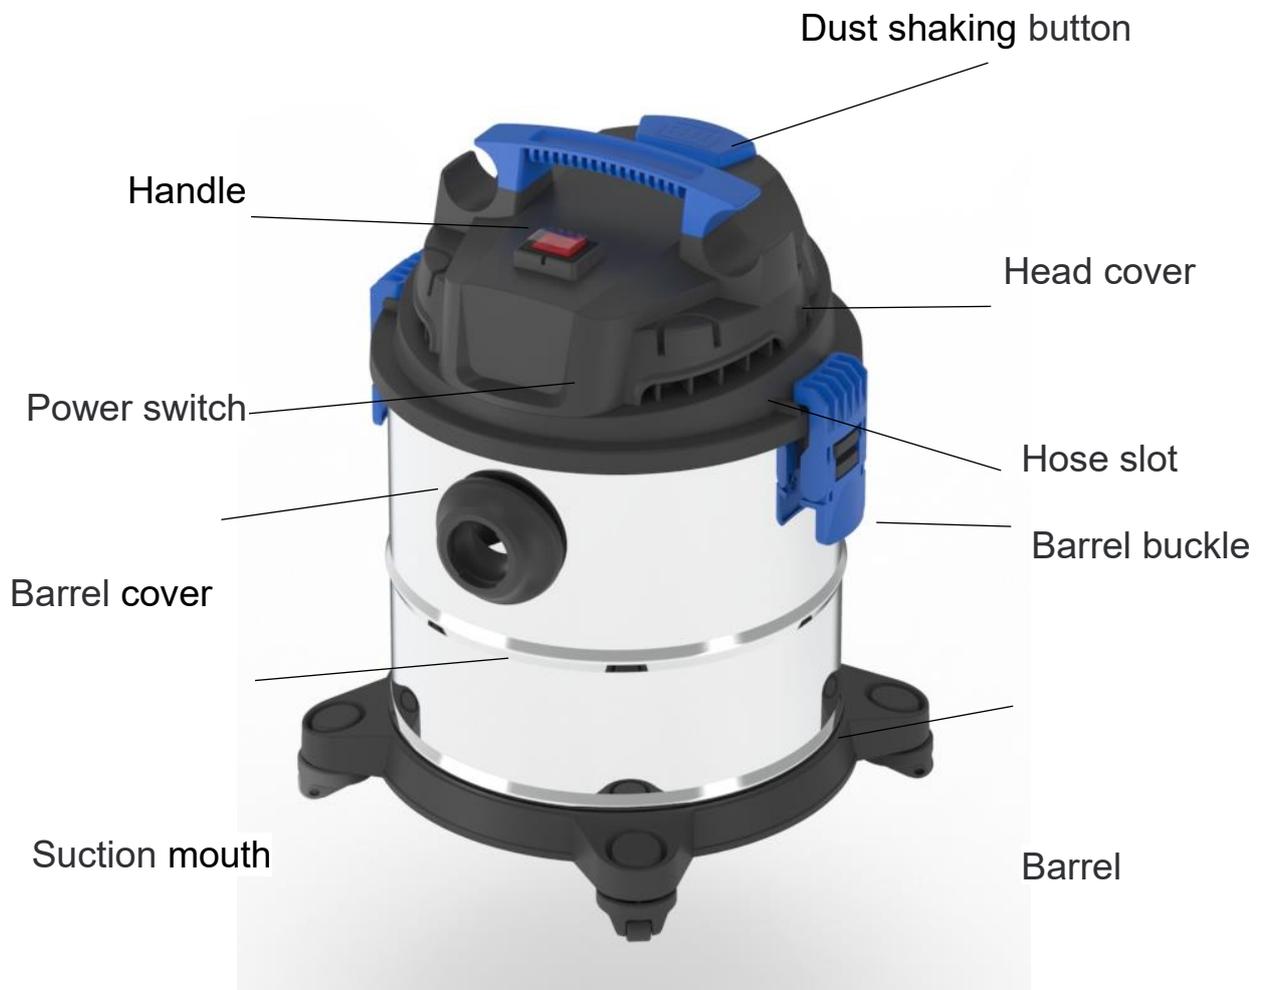

Base _____

Caster _____

Accessories:



Plastic tube



2 plastic tube



Cloth filter



Floor brush



2 in 1 nozzle



Sponge filter

Functional operation instructions

1. Remove the product and accessories from the box and check that the accessories and equipment are in good condition
2. Loosen the buckles, pick up the main part, remove the attachment from the dust collector, and check if the filter is installed in place.
3. There are special screws and gaskets in the package, fix the casters to the axle of the base with screws and gaskets.



4. Connect one end of the hose assembly to the suction nozzle and the other end to the suction attachment.

5. Plug in the power cord, press the power switch and start vacuuming.


6. When insufficient suction is found in the process of vacuuming, close the suction port and press the dust shaking button for many times to realize the function of dust shaking by counter-airflow and improve the suction.




7. When using the water absorption function, remove the filter and install the sponge filter to ensure normal water absorption of the machine.

8. How to use dust shake function:

- ① Vacuuming work every 1-2 minutes to use the dust shake function.
- ② When using the dust shake function, don't turn off the power, you must first block the suction port.
- ③ Block the suction port and press the shake button for 1 second, then release, press, repeat this process 10 times.

9. Product installation drawing:

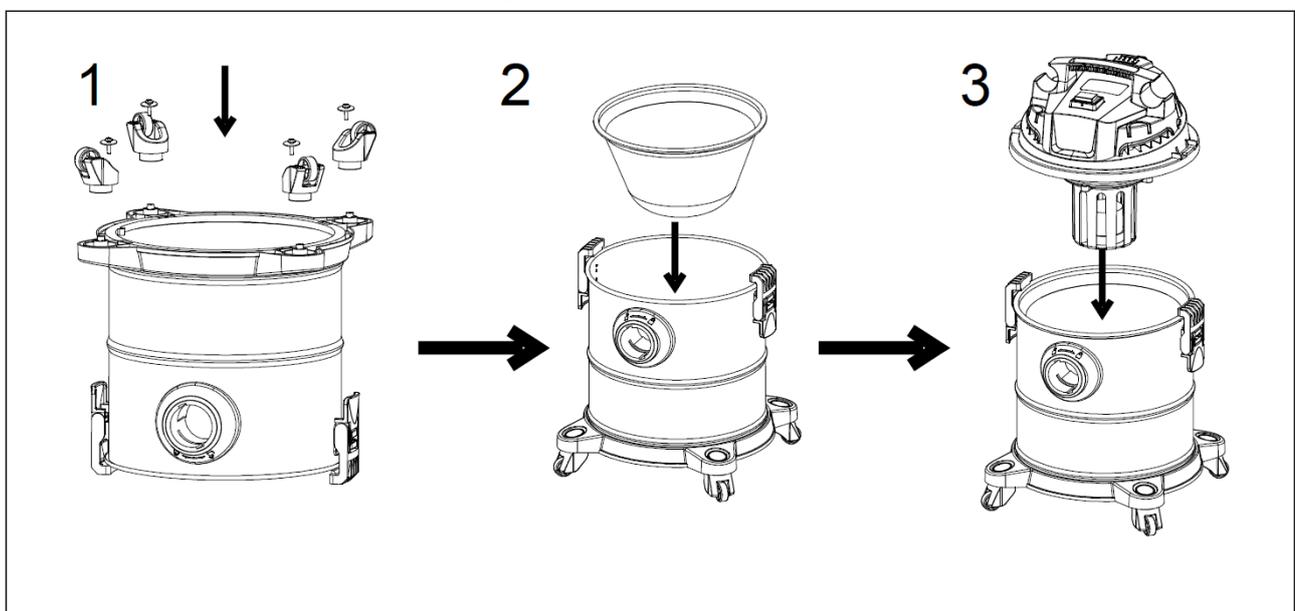


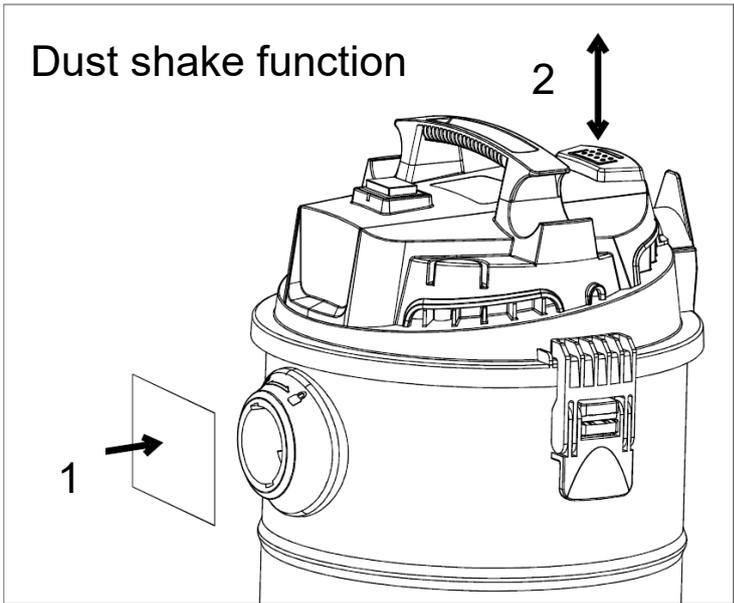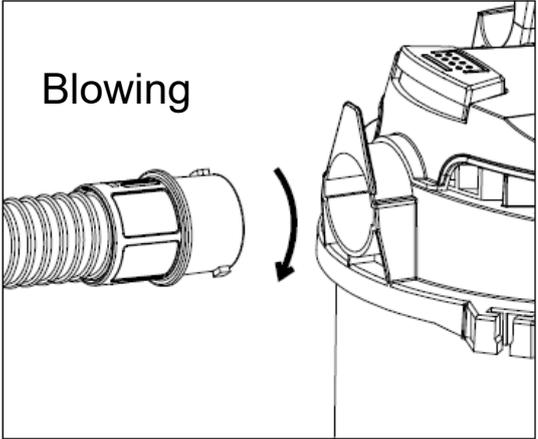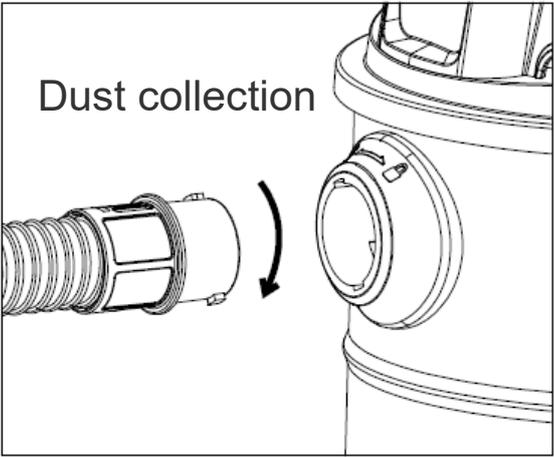

- ⊘ Do not use the machine in the combustible and explosive places in case the motor spark causes fire
- ⊘ Do not jam the air inlet mouth, in case temperature rises and damages the motor
- ⊘ Do not collect combustible and explosive objects such as glowing cigarettes, gasoline, etc.
- ⊘ Do not collect sharp objects
- ⊘ Do not collect objects which can easily attach on the filter such as calcareousness powder, gesso and graphite powder. Because those will block the ventilation and damage the motor.
- ⊘ Turn off the machine and remove the plug each time after using or when being repaired.
- ⊘ Keep the machine away from strong sunlight and high temperature places in case its plastic is distorted.



Please turn off the power switch first and pull out the power plug of the cleaning filter before maintenance. Take out the filter and flush with water. It is recommended to flush the filter under the tap. Flush the dust on the filter. Put the filter in a well ventilated place and dry it naturally for storage and next use.

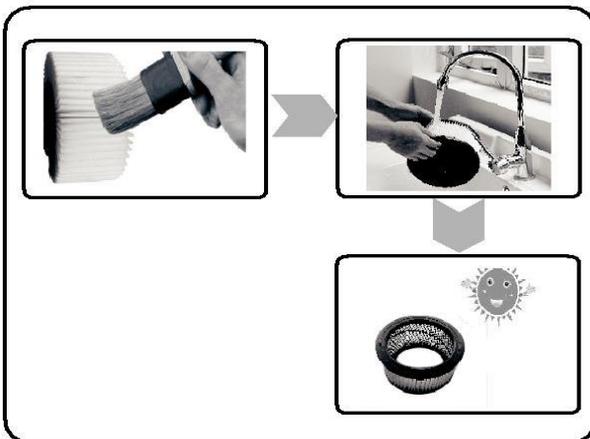

- Shake off the moisture and dry it completely(in order to prevent peculiar smell or blockage)
- Do not dry it with air blower and other hot wind(in order to prevent deformation and fault).
- It is prohibited to use detergent, bleaching agent, diluents, alcohol, etc.(in order

to avoid crack, color change, etc)



Fault	Probable cause	Treatment
Machine operation failure	1.Check whether the power plug is firmly inserted into the socket. 2.Check whether there is electricity of the power socket.	1.Reinsert the plug into the socket. 2.Ensure that there is electricity of the power socket.
Weakening of suction	1.Check whether the floor brush, hose and additional pipe are blocked. 2.Check whether the dustbin and main part are well	1.Remove the blockage in time. 2. Reassemble in place. 3. Clean or replace filter.

	<p>assembled.</p> <p>3.Check whether the filter is blocked.</p>	
Abnormal noise	<p>1.Check whether the filter is blocked.</p>	<p>1.Please remove the garbage and maintain the filter</p>

Please send the machine to our maintenance center if the fault cannot be eliminated according to the above methods. Users are prohibited to disassemble the machine by themselves.